SLIDER™

User Guide

KYOCERA

User Guide for the Slider phone

This manual is based on the production version of the Kyocera SE44 phone. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice. The products and equipment described in this documentation are manufactured under license from QUALCOMM Incorporated under one or more of the following U.S. patents:

4,901,307	5,056,109	5,099,204	5,101,501	5,103,459	5,107,225
5,109,390	5,193,094	5,228,054	5,257,283	5,265,119	5,267,261
5,267,262	5,280,472	5,283,536	5,289,527	5,307,405	5,309,474
5,337,338	5,339,046	5,341,456	5,383,219	5,392,287	5,396,516
D356,560	5,408,697	5,414,728	5,414,796	5,416,797	5,426,392
5,437,055	D361,065	5,442,322	5,442,627	5,452,473	5,461,639
5,469,115	5,469,471	5,471,497	5,475,870	5,479,475	5,483,696
5,485,486	5,487,175	5,490,165	5,497,395	5,499,280	5,504,773
5,506,865	5,509,015	5,509,035	5,511,067	5,511,073	5,513,176
5,515,177	5,517,323	5,519,761	5,528,593	5,530,928	5,533,011
5,535,239	5,539,531	5,544,196	5,544,223	5,546,459	5,548,812
5,559,881	5,559,865	5,561,618	5,564,083	5,566,000	5,566,206

5,566,357	5,568,483	5,574,773	5,574,987	D375,740	5,576,662
5,577,022	5,577,265	D375,937	5,588,043	D376,804	5,589,756
5,590,069	5,590,406	5,590,408	5,592,548	5,594,718	5,596,570
5,600,754	5,602,834	5,602,833	5,603,096	5,604,459	5,604,730
5,608,722	5,614,806	5,617,060	5,621,752	5,621,784	5,621,853
5,625,876	5,627,857	5,629,955	5,629,975	5,638,412	5,640,414
5,642,398	5,644,591	5,644,596	5,646,991	5,652,814	5,654,979
5,655,220	5,657,420	5,659,569	5,663,807	5,666,122	5,673,259
5,675,581	5,675,644	5,680,395	5,687,229	D386,186	5,689,557
5,691,974	5,692,006	5,696,468	5,697,055	5,703,902	5,704,001
5,708,448	5,710,521	5,710,758	5,710,768	5,710,784	5,715,236
5,715,526	5,722,044	5,722,053	5,722,061	5,722,063	5,724,385
5,727,123	5,729,540	5,732,134	5,732,341	5,734,716	5,737,687
5,737,708	5,742,734	D393,856	5,748,104	5,751,725	5,751,761
5,751,901	5,754,533	5,754,542	5,754,733	5,757,767	5,757,858
5,758,266	5,761,204	5,764,687	5,774,496	5,777,990	5,778,024
5,778,338	5,781,543	5,781,856	5,781,867	5,784,406	5,784,532
5,790,589	5,790,632	5,793,338	D397,110	5,799,005	5,799,254
5,802,105	5,805,648	5,805,843	5,812,036	5,812,094	5,812,097
5,812,538	5,812,607	5,812,651	5,812,938	5,818,871	5,822,318

5,825,253 5,828,348 5,828,661 5,835,065 5,835,847 5,839,052
5,841,806 5,842,124 5,844,784 5,844,885 5,844,899 5,844,985
5,848,063 5,848,099 5,850,612 5,852,421 5,854,565 5,854,786
5,857,147 5,859,612 5,859,838 5,859,840 5,861,844 5,862,471
5,862,474 5,864,760 5,864,763 5,867,527 5,867,763 5,870,427
5,870,431 5,870,674 5,872,481 5,872,774 5,872,775 5,872,823
5,877,942 5,878,036 5,870,631 5,881,053 5,881,368 5,884,157
5,884,193 5,884,196 5,892,178 5,892,758 5,892,774 5,892,816
5,892,916 5,893,035 D407,701 5,898,920 5,903,554 5,903,862
D409,561 5,907,167 5,909,434 5,910,752 5,911,128 5,912,882
D410,893 5,914,950 5,915,235 5,917,708 5,917,811 5,917,812
5,917,837 5,920,284 D411,823 5,923,650 5,923,705 5,926,143
5,926,470 5,926,500 5,926,786 5,930,230 5,930,692

Other patents pending.

Kyocera is a registered trademark of Kyocera Corporation. Doodler is a trademark of Kyocera Wireless Corp. QUALCOMM is a registered trademark, and BREW and BREW Shop are trademarks of QUALCOMM Incorporated. Touch2Talk, Axcess Apps, and Axcess Shop are trademarks of Alltel. Openwave is a trademark of Openwave Systems

Incorporated. eZiText is a registered trademark of Zi Corporation.
All other trademarks are the property of their respective owners.

Copyright © 2004 Kyocera Wireless Corp. All rights reserved.
Ringer Tones Copyright © 2000-2002 Kyocera Wireless Corp.

82-M8895-1, Rev. 001

FCC/IC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Kyocera Wireless Corp. (KWC) supplied and approved holster (TXLCC10049). Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR values for this model phone are:

AMPS/CDMA modes (Part 22) – head: 1.49 W/kg, Body-worn: 0.85 W/kg; PCS/CDMA mode (Part 24) – head: 0.86 W/kg, Body-worn: 0.99 W/kg.

(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). For body-worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the Kyocera Wireless Corp. (KWC) supplied and approved holster TXLCC10049, or when used with an accessory that

contains no metal and that positions the handset a minimum of 25.0 mm from the body.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section **http://www.fcc.gov/oet/fccid** after searching on FCC ID OVFKWC-SE44. Additional information on SAR can be found on the Cellular Telecommunications and Internet Association (CTIA) web-site at **http://www.wow-com.com**.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give

additional protection for the public and to account for any variations in measurements.

Caution

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and users' authority to operate the equipment.

Walkie-Talkie radio feature

When using your phone as a walkie-talkie radio, hold the phone a minimum separation distance of one inch (2.5 cm) between your face and the device, including the antenna, to comply with FCC exposure limits.

Optimize your phone's performance

Use the guidelines on see page 3 to learn how to optimize the performance and life of your phone and battery.

Air bags

If your vehicle has an air bag, DO NOT place installed or portable phone equipment or other objects over the air bag or in the air bag deployment

area. If equipment is not properly installed, you and your passengers risk serious injury.

Medical devices

Pacemakers—Warning to pacemaker wearers: wireless phones, when in the ‘on’ position, have been shown to interfere with pacemakers. The phone should be kept at least six (6) inches away from the pacemaker to reduce risk. The Health Industry Manufacturers Association and the wireless technology research community recommend that you follow these guidelines to minimize the potential for interference.

- Always keep the phone at least six inches (15 centimeters) away from your pacemaker when the phone is turned on.
- Do not carry your phone near your heart.
- Use the ear opposite the pacemaker.
- If you have any reason to suspect that interference is taking place, turn off your phone immediately.

Hearing aids—Some digital wireless phones may interfere with hearing aids. In the event of such interference, you may want to consult Alltel or call the customer service line to discuss alternatives.

Other medical devices—If you use any other personal medical device, consult the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

In health care facilities—Turn your phone off in health care facilities when instructed. Hospitals and health care facilities may be using equipment that is sensitive to external RF energy.

Potentially unsafe areas

Posted facilities—Turn your phone off in any facility when posted notices require you to do so.

Aircraft—FCC regulations prohibit using your phone on a plane that is in the air. Turn your phone off or switch it to Airplane Mode (see page 33) before boarding aircraft.

Vehicles—RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy.

Blasting areas—Turn off your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres—Turn off your phone when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane

- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

Use with care

Use only in normal position (to ear). Avoid dropping, hitting, bending, or sitting on the phone.

Keep phone dry

If the phone gets wet, turn the power off immediately and contact your dealer. Water damage may not be covered under warranty.

Resetting the phone

If the screen seems frozen and the keypad does not respond to keypresses, reset the phone by removing and replacing the battery (see see page 2). If the problem persists, return the phone to the dealer for service.

Accessories

Use only Kyocera Wireless Corp. accessories with Kyocera Wireless Corp. phones. Use of any unauthorized accessories may be dangerous and may invalidate the phone warranty if said accessories cause damage or a defect to the phone. To shop online for phone accessories, visit **www.kyocera-wireless.com/store**.

To order by phone, call 800-349-4188 (U.S. and Canada) or 858-882-1410.

Radio frequency (RF) energy

Your telephone is a radio transmitter and receiver. When it is on, it receives and sends out RF energy. Alltel's network controls the power of the RF signal. This power level can range from -50 to +28 dBm. In August 1996, the U.S. Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. These guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies in the following reports:

- ANSI C95.1
  (American National Standards Institute, 1992)

- NCRP Report 86 (National Council on Radiation Protection and Measurements, 1986)
- ICNIRP (International Commission on Non-Ionizing Radiation Protection, 1996)

Your phone complies with the standards set by these reports and the FCC guidelines.

E911 Mandates

Where service is available, this handset complies with the Phase I and Phase II E911 Mandates issued by the FCC.

Battery and charger specifications

Charger	**Input**	**Output**
TXTVL10034	100-240VAC/50/60Hz	4.5V 1.5A
TXACA10002	120VAC / 60Hz	5.2V 400mA
Standard Battery: 3.7V /1100mAh		

Customer support

Alltel's customer support department may be accessible directly from your phone when you dial a number such as *611 (check with Alltel).

They can answer questions about your phone, phone bill, call coverage area, and specific features available to you, such as call forwarding or voicemail. For questions about phone features, refer to the materials provided with your phone, or visit **www.kyocera-wireless.com**.

For additional questions, you may contact the Kyocera Wireless Corp. Customer Care Center in one of the following ways:

- Web site: **www.kyocera-wireless.com**
- Email: phone-help@kyocera-wireless.com
- Telephone: 1-800-349-4478 (U.S. and Canada) or 1-858-882-1401.

Before requesting support, please try to reproduce and isolate the problem. When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider.
- The actual error message or problem you are experiencing.
- The steps you took to reproduce the problem.
- The phone's electronic serial number (ESN). To locate the ESN select **Menu** → **Phone Info** and scroll down to ESN for the 11-digit number.

Qualified service

If the problem with your phone persists, return the phone with all accessories and packaging to the dealer for qualified service.

Become a product evaluator

To participate in the testing and evaluation of Kyocera Wireless Corp. products, including cellular or PCS phones, visit **beta.kyocera-wireless.com**.

093 453 037

Kyocera Wireless Corp.

10300 Campus Point Drive, San Diego, CA 92121 U.S.A.

Visit us at **www.kyocera-wireless.com**

To purchase accessories, visit
www.kyocera-wireless.com/store

CONTENTS

1 Getting Started 1
Installing the battery 1
Charging the battery 1
Performing basic functions 4
Getting to know your phone 5
Using menus 7
Understanding screen icons 9

2 Using Touch2Talk. 11
Making T2T calls 11
Creating T2T groups 18
Dealing with multiple calls 24

3 Making and Answering Calls. 28
Making a call 28
Calling Emergency services 32
Speed dialing 37
Setting up voicemail 38
Silencing an incoming call 40

Using the speakerphone 40
Receiving data or faxes 41
Roaming 41

4 Entering Letters, Numbers, and Symbols 43

5 Storing Contacts 48
Saving a contact entry 48
Editing or erasing a contact 51
Finding contact information 54

6 Sending and Receiving Text Messages 57
Sending text messages 57
Retrieving text messages 64
Customizing message settings 69

7 Customizing Your Phone 72
Silencing all sounds 73
Choosing a different ringer 75
Adjusting volume 77
Using shortcuts 78
Choosing a different language 79
Personalizing the screen 80

Creating a secure environment 84
Setting message alerts 88
Data settings 89
Setting position location 92

8 Using Voice Recognition 93
Setting up voice dialing 93
Calling using voice tags 94
Using voice features with a hands-free car kit 97
Training voice recognition 100

9 Using Axcess Apps 101
How does Axcess Apps work? 101
Downloading an application 102
Opening an application 103
Viewing application details 104
Removing an application 104
Disabling an application 104
Checking available memory 105

10 Using Tools 106
Voice Memo 106

Scheduler 108
Alarm Clock 109
Tip Calculator 110
Calculator 110
Timer 111
Stopwatch 111

11 Media Gallery 113
Doodler 113
My Sounds 116
My Pictures 116

12 Connecting to the Internet 118

Index 122

1 GETTING STARTED

Your Kyocera SE44 (Slider) phone comes with an internal/removable lithium ion (LiIon) battery. **Fully charge the battery before using the phone.**

Installing the battery

1. Hold the phone face down.
2. Place the battery on the bottom lip of the phone casing, aligning the metal contacts with those inside the phone.
3. Push down on the battery until it clicks into place.

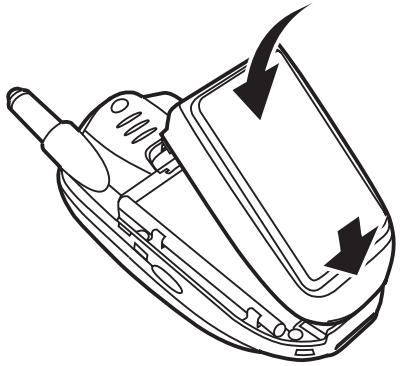

Charging the battery

The battery is partially charged when you receive your phone. You must have at least a partial charge in the battery to make or receive calls, regardless of whether the AC adapter is connected to the phone.

You can safely recharge the battery at any time, even if it has a partial charge.

To charge the battery, connect the AC adapter to the jack at the bottom of the phone (as shown), then connect the adapter's plug to a wall outlet.

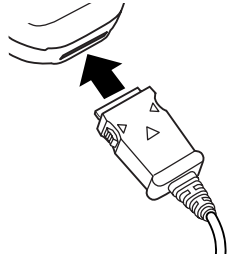

The battery icon in the upper-right corner of the screen tells you whether the phone is:

- Partially charged
- Fully charged
- Charging (the icon is scrolling)

Note: If you use the phone while the AC adapter is connected, the battery is not being charged.

Removing the battery

1. Turn off the phone.
2. Hold the phone face down. Slide up the latch on the back of the phone and lift the battery away from the phone.

Caring for the battery

General safety guidelines

- Do not take apart, puncture, or short-circuit the battery.
- If you have not used the battery for more than a month, recharge it before using your phone.
- Avoid exposing the battery to extreme temperatures, direct sunlight, or high humidity.
- Never dispose of any battery in or near a fire. It could explode.

Common causes of battery drain

- Playing games
- Using the Web
- Keeping backlighting on
- Making and receiving Touch2Talk (T2T) calls
- Operating when far away from a base station or cell site
- Operating when no service is available, or service is available intermittently
- Using data cables or accessories
- Using high earpiece and ringer volume settings
- Repeating sound, vibration, or lighted alerts

Performing basic functions

Turn the phone on and off: Press and hold until the animation appears. You must slide the phone open before pressing this key to turn it off.

Make a cellular call: Slide the phone open. Extend the antenna. Enter the number and press .

Make a Touch2Talk call (T2T): Slide the phone open. Extend the antenna. Enter the 10-digit phone number and press .

End a call: Slide the phone closed, or press .

Answer a call: Slide the phone open. Extend the antenna. Press .

Access voicemail: Slide the phone open. Press and hold and follow the system prompts. Contact Alltel for details about their voicemail system.

Verify your phone number: Select **Menu** → **Phone Info**.

Silence the ringer: Press or press up or down; then to answer.

Access menu shortcuts: From the home screen, press and hold right, left, up, or down for shortcuts to functions explained in item 8 on page 10.

Getting to know your phone

1. **Home screen**. Briefly press the End/Power key (item 5, below) to return to the home screen.
2. **OK key** accesses the menu when phone is open.
3. **Clear key** erases the last character in text entry, or returns to the previous menu.
4. **Send/Talk key** answers a call or starts a call to a dialed number when phone is open. Also, one press activates voice dialing (see page 94), two presses displays a list of recent calls, and three presses redials the last number called.
5. **End/Power key** turns the phone on. Also turns phone off, ends a call, or returns you to the home screen when phone is open.
6. **APPS key** provides a shortcut to Alltel's Axcess Apps services.
7. **Speakerphone key** answers calls and switches the speakerphone on and off.

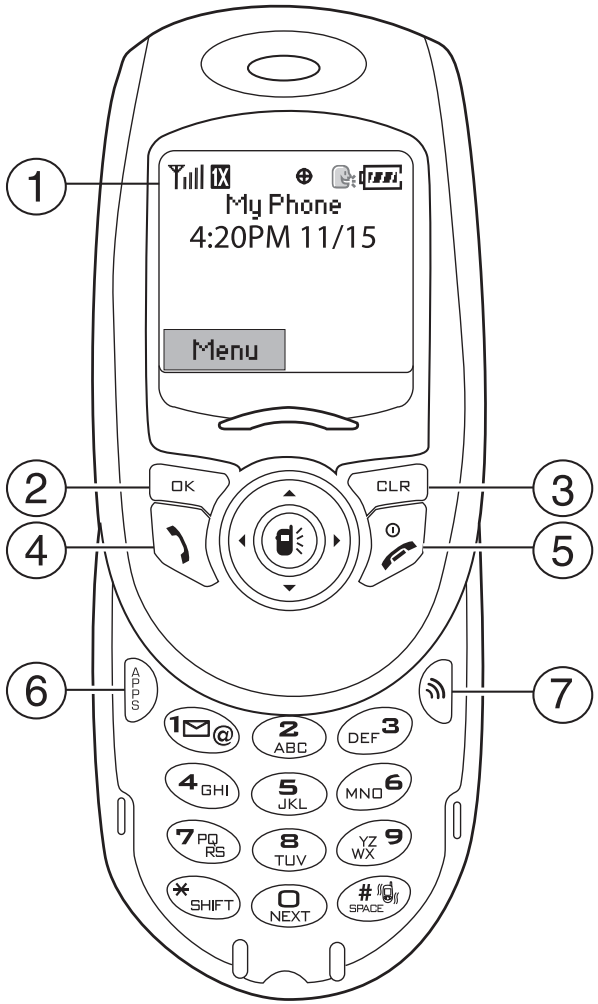

Important: You can make T2T calls to saved contacts with the phone closed. However, you must slide your phone open to use the keys for standard calls and other functionality.

8 **Navigation key** scrolls through lists, positions cursor when phone is open, and accesses shortcuts from the home screen: (left) opens Web Browser; (right) sets phone to vibrate only; (up) accesses a personal shortcut; (down) opens Contacts directory.

9 **Walkie-Talkie button.** Press the Walkie-Talkie button to communicate with other compatible T2T capable phones.

10 **Jack for Headset** (sold separately) ⚠

11 **1 key** accesses voicemail and enters punctuation during text entry.

12 **Keypad** for entering numbers, letters, or symbols.

13 *** Shift key** changes capitalization and text entry modes (see page 46).

14 **0 Next key** cycles through word choices during eZiText® text entry (see page 45).

15 **Space #** key enters a space during text entry. Also switches Silent Mode (vibrate only) on or off.

16 **Jack for data cable** (sold separately) ⚠ and **AC Adapter** (included)

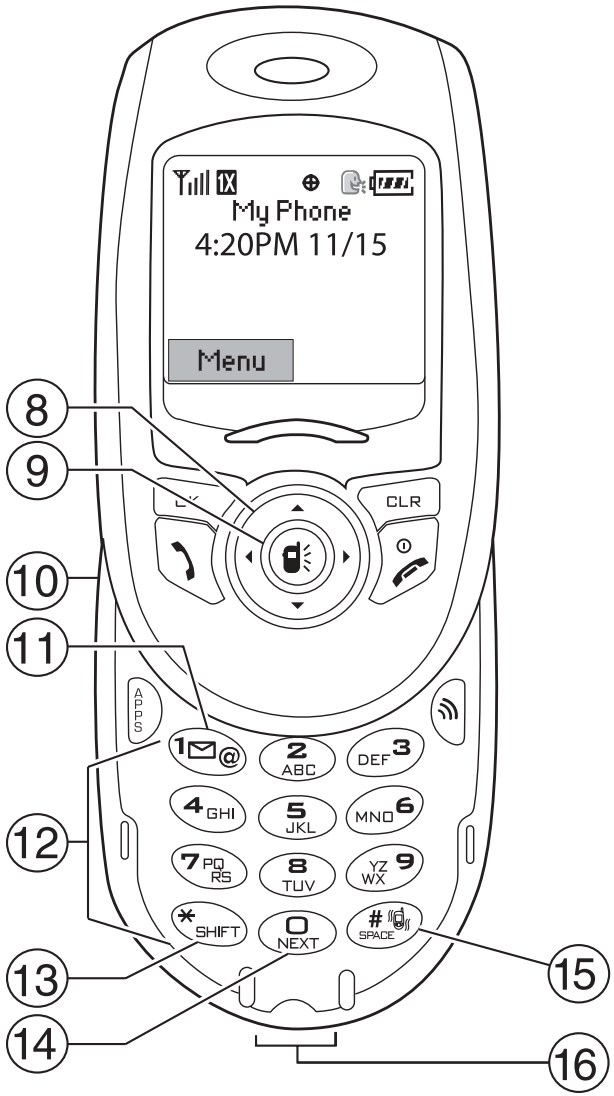

Important: Inserting an accessory into the incorrect jack will damage the phone.

Using menus

The main menu includes the following:

Touch2Talk

T2T Contacts, T2T Groups, Add New Contact, Erase Contact, Manage Groups, My Availability

Recent Calls

All Calls, Incoming Calls, Outgoing Calls, Missed Calls, Erase Recent Calls

Contacts

Touch2Talk, View Phone List, Add New, Find Name, Add Voice Dial, Speed Dial List, Voice Dial List, Business List, Personal List, Information

Media Gallery

My Sounds, My Pictures, Doodler™

Messages

Voicemail, Send New, InBox, Net Alerts, OutBox, Saved, Erase Msgs, Group Lists, Msg Settings

Web Browser

Connects to the Internet

Settings

Silent Mode, Sounds, Display, Voice Services, Security, Call Information, Network, Convenience, Messaging, Accessories

Axcess Apps

Axcess Shop, Settings, Help

Tools

Voice Memo, Scheduler, Alarm Clock, Tip Calculator, Calculator, Timer, Stopwatch

Phone Info

Displays phone number, ESN, and software version.

- From the home screen, press OK to select **Menu**.
- Press left, right, up, or down to highlight one of the menus.*
- Press OK to select a menu or menu item.
- Press up or down to view menu items.
- Press CLR to back up a menu level.
- Press to return to the home screen.

* To change the way the menus appear, select **Menu** → **Settings** → **Display** → **Main Menu View**, then select either **Graphic** or **List** and press OK.

Note: In this guide, the use of an arrow → tells you to select an option from a menu.
For example, **Menu** → **Settings** means select **Menu**, then select the **Settings** option.

Understanding screen icons

These icons may appear on your phone's screen.

The phone is operating in IS2000 (1X) digital mode.

The phone is operating in IS95 digital mode.

The phone is operating in Analog (FM) mode.

The phone is receiving a signal. You can make and receive calls. Fewer bars indicate a weaker signal.

Touch2Talk Available. Contact can accept calls.

Touch2Talk Do Not Disturb. Calls cannot be sent to contact.

Touch2Talk Off-Line. The handset is turned off, or the contact is not registered with the voice network.

The phone is set to show its position location to emergency services only.

The phone is set to show its position location to Alltel as well as to emergency services.

A call or message is in progress.

Service is not available. You cannot make or receive calls.

The phone is roaming outside of its home service area.

High-speed (3G) data service is available and active on your phone. Check with Alltel for availability.

(blinking) The phone is sending high-speed data.

(blinking) The phone is receiving high-speed data.

High-speed data service is available, but the phone is dormant.

The alarm clock is set.

The phone is in privacy mode or is accessing a secure Web site.

You have a text message, voicemail, or page. (If this icon is flashing, the message is urgent.)

The battery is fully charged. The more black bars, the greater the charge.

2 USING TOUCH2TALK

The Touch2Talk (T2T) feature on your Slider phone allows you to quickly communicate with an individual or group. Once connected, simply press and hold ⓟ to communicate.

Note: You can only use the T2T feature with other compatible T2T phones.

Tip: When using your phone as a walkie-talkie radio, hold the phone in a vertical position one to two inches (2.5 to 5 cm) away from your mouth.

Making T2T calls

There are five ways to make T2T calls:

- From the home screen, press ⓟ to access the **Touch2Talk** main menu. Select a contact or group and press ⓟ again to connect. You can do this when the phone is either open or closed.
- Open the phone and enter a 10-digit phone number on the keypad. Press ⓟ to connect.

- Open the phone and select a T2T contact by choosing **Menu** → **Touch2Talk** → **T2T Contacts.** Highlight the contact you want to call and press ⓟ to connect.
- Open the phone and select a T2T contact by choosing **Menu** → **Recent Calls**. Select a list: **Incoming Calls**, **Outgoing Calls**, or **Missed Calls**. Highlight the contact you want to call and press ⓟ to connect. For more about Recent Calls, see page 35.
- Open the phone and select a T2T contact by choosing **Menu** → **Contacts**. Select **View Phone List** or **Find Name** to find the contact you want to call. Highlight the contact to call and press ⓟ to connect. For more about Contacts, see page 48.

You can also make a group T2T call using the phone's T2T groups list. See page 18.

Making a private T2T call

1. Press and hold ⓟ. The "Ready to Speak" tone (three rapid chirps) sounds when the audio path is ready and the contact is available.

   Note: If the contact is unavailable or offline, the "Bong" tone sounds (a single low-pitched beep).

2. Continue to press ⓟ while speaking your message.

3. Release when finished speaking your message. This allows the called recipient to reply.
4. Press again to speak.
5. To end the T2T call, press , or press to select **End Call** from the menu screen.

Note: If the called party ends the call, the call is automatically disconnected.

Tip: If you originate a call to a person who is actively engaged in a cellular call or a T2T call, you hear the “Ready to Speak” tone and your voice message is stored. The called party can choose to answer or ignore the new incoming call. If the call is accepted, the initial voice message is played to the called party and you and the called person hear the “Floor Free” tone (a single high-pitched beep).

Viewing recent T2T calls

1. Select **Menu** → **Recent Calls**.
2. Select a list: **All Calls, Incoming Calls**, **Outgoing Calls**, **Missed Calls, or Erase Recent Calls**.
3. Select a recent caller.

4. Press to return the call as a T2T call, or for a standard call. For details on missed calls, see page 34.

Note: The recent calls list is still available when you're outside your T2T service area. However, you are not able to make T2T calls. appears telling you that your T2T call is pending and cannot be made at that time.

Adding new T2T contacts

You can add new T2T contacts (up to 200, including standard contacts, page 48) and view their presence in the T2T Contacts directory using the main T2T menu.

Note: You cannot save a T2T contact that already exists in your T2T contacts directory, nor can you save yourself as a T2T contact.

---

1. Select **Menu** → **Touch2Talk** → **Add New Contact**.
2. Enter the T2T contact number.
3. Select **Next.**
4. Enter the T2T contact name.

Note: You do not need to enter the name if it is already in the contacts list.

5. Press OK to select **Save.** The message, "Save Contact Now?" appears.

6. Press OK to select **Yes.** The message, “Sending request...” appears. If the T2T contact number is valid and the T2T contact accepted your request to be added, then the message, “Contact Name Added” appears.

Note: If you change a T2T contact’s phone number, then you have to delete the existing contact name from the contacts directory and add the name again. See “Adding new T2T contacts.”

Refusals

Two types of refusals are possible while trying to add new T2T contacts:

Manual—The T2T contact received your message, but refused your invitation to be added to your T2T contact list. The message, “Contact Name Not Added” appears. Press OK to select **OK** and return to the T2T main menu.

Service Driven—The T2T contact has not responded to your invitation within a three-minute period. This means the T2T contact’s phone is off or is out of the service area. The message, “Contact Name Not Added” appears. Press OK to select **OK** and return to the T2T main menu. Try adding this T2T contact later.

Erasing individual T2T contacts

1. Select **Menu** → **Touch2Talk** → **Erase Contact**.
2. Highlight the T2T contact name you wish to erase.
3. Press OK to choose **Select**. A check mark appears beside the contact name. To erase additional contacts, press up or down and select their names.
4. Press right to highlight **Next** and press OK. The message, “Erase Contact(s)?” appears.
5. Select **Yes** to erase the contact. The message, “Sending request to erase contact(s)...” appears.
   - When the message is successful, “Request Sent” appears.
   - When the message is unsuccessful, the “Bong” tone sounds and “Unable to erase contact(s) at this time. Try again later” appears.

Erasing T2T call history

See page 36 to erase call history

Checking your contacts’ availability

Your phone lets you know when T2T contacts are:

Available —A bold T2T icon means the contact can accept calls.

Do Not Disturb —Calls cannot be sent to contact.

Off-Line —A dim T2T icon means the handset is turned off, or the contact is not registered with the voice network.

Note: Off-Line is a network-dependent option that you cannot choose.

Checking and setting your availability

Regardless of how you set your availability (presence), you can still make T2T calls.

1. Select **Menu** → **Touch2Talk** → **My Availability**.
2. Select an option:
   - **Available** allows you to make and receive T2T calls.
   - **Do Not Disturb** ensures that you will not receive T2T calls.

Note: You can also set your phone to access **My Availability** from the home screen by pressing up (see page 78).

Creating T2T groups

You can create up to 30 groups with up to 10 members per group (not to exceed 200, including all saved contacts). You can create a T2T group from a list of existing contacts in other groups or add new contacts to a group from scratch.

Note: To establish a group list your phone must first be provisioned by Alltel.

---

1. Select **Menu** → **Touch2Talk** → **Manage Groups** → **Create Group**.
2. Enter the new group name using the phone's keypad. See page 43 if you need help entering text.
3. Press OK. The **Select Contacts** screen appears.
4. Highlight the name of the T2T contact you want to add to your new group and press OK. A check mark appears beside the contact name.

   Note: The T2T contact must first be provisioned from the handset or a Web interface before contact can be added to a group.
5. If no T2T contact names appear, or if the desired contact is not on the list, then press right to highlight **Add New** and press OK.
6. Enter the phone number of the T2T contact name to be added to the group.

7. Press OK to select **Next**.
8. Enter the name of the T2T contact to be added, using the phone's keypad.

   Note: If the contact is already in your Contacts directory, then the name is automatically stored.
9. Press OK to select **Save**. The prompt "Add Another Contact to Group?" appears.
   - Select **Yes** if you want to add a new T2T contact to the group, then repeat steps 6 through 9.
   - Select **No** if you do not want to add a new T2T contact to the group.
10. When you are finished adding T2T contacts to your newly created group, the prompt "Save Group Contacts Now?" appears.
   - Select **Yes** to send the message "Group Creation."
   - Select **No** to return to the Select Contacts screen. This allows you to continue adding new T2T contacts to the group.

When you are finished creating a new group and adding members to it, invitations are sent to the members asking for their permission to join your newly created group.

Note: The invitation includes your name or number and the group name, but does not list all invited members of the group. After accepting an invitation, the new member can select the group name and view the list of members.

Making a group T2T call

1. Select **Menu** → **Touch2Talk** → **T2T Groups**.
2. Highlight the group you want to call.
3. Press and hold ⓟ. When the audio path is ready and the group is available, the “Ready to Speak” tone sounds.

Note: If the group is unavailable or offline, or if you attempt to take the floor on a group call while someone else is speaking, the “Bong” tone sounds.

4. Speak your message while continuing to press ⓟ.
5. Release ⓟ when finished speaking your message. This allows the called recipients in the group a chance to reply.

Note: When a T2T call is connected, there is a “no speaker” time-out. If no one takes the floor of a T2T call for the duration of this time-out, then the T2T call is disconnected automatically.

6. Press PTT again to speak.
7. To end the T2T call, press END, or select **End Call** from the menu screen.

Adding a member to a T2T group

1. Select **Menu** → **Touch2Talk** → **Manage Groups** → **Add Member**. The **Select Group** screen appears. Press NAV up or down to highlight the group to which you want to add the new member.
2. Press OK. The **Add Member** screen appears. Highlight the name of the new member that you want to add to the group.

Note: If no T2T contact names appear, or if the desired contact is not on the list, then perform steps 5 through 9 of “Creating T2T Groups” on page 18.

3. Press OK to choose **Select**. A check mark appears beside the contact name.
4. Press NAV right to highlight **Save** and press OK. Your Slider phone sends an invitation to the members you have added to the group.

Editing a T2T group name

You can edit names only of groups that you originally created.

1. Select **Menu** → **Touch2Talk** → **Manage Groups** → **Edit Group Name**.
2. Highlight the name of the group to edit.
3. Press OK.
4. Edit the talk group name using the phone's keypad. See page 43 if you need help entering text.
5. Press OK to select **Save**. All members in your group are notified and updated.

Erasing a T2T group

You can erase only T2T groups that you originally created.

1. Select **Menu** → **Touch2Talk** → **Manage Groups** → **Erase Group**.
2. Highlight the name of the group to erase.
3. Press OK. The prompt "Erase Group?" appears.
4. Press OK to select **Yes.** The message "Group Erased" appears.

Note: T2T talk group members will still exist in the T2T Contacts list.

Erasing a T2T group member

You can erase T2T group members only from groups that you originally created.

1. Select **Menu** → **Touch2Talk** → **Manage Groups** → **Erase Member.**
2. Highlight the name of the group containing the member you want to erase.
3. Highlight the name of the member to erase.
4. Press OK to choose **Select**. A check mark appears beside the contact name. To erase additional members, press ◯ up or down and select their names.
5. Press OK to select **Erase.** The prompt “Erase Member(s)?” appears. Select **Yes** to erase the member name, or **No** to discontinue and return to the previous screen.

Leaving a T2T group

You cannot leave a T2T group that you created.

1. Select **Menu** → **Touch2Talk** → **Manage Groups** → **Leave Group**.
2. Highlight the name of the group you want to leave.
3. Press OK. The prompt “Leave Group?” appears.

4. Select **Yes** to leave the group, or **No** to discontinue and return to the previous screen. A message requesting that you be removed from the group is sent to Alltel. Your phone then returns to the T2T menu.

Dealing with multiple calls

There will be times when you have to handle multiple call situations. For example, you are engaged in an active T2T call, and a new cellular call arrives as a “Call Waiting” call.

Note: Although you can have an active T2T call with the phone in the closed position, you must slide the phone open to make or receive a cellular call.

Receiving calls

There are three incoming call situations:

- Receiving a cellular call while on a T2T call
- Receiving a T2T call while on a T2T call
- Receiving a T2T call while on a cellular call

These call situations may occur while you are engaged in an active T2T or cellular call and a new T2T or cellular call arrives as a “Call Waiting” call. You can answer or ignore the incoming call.

- To answer the call, press OK to select **Answer** on the screen or press .

Note: If you accept the incoming T2T or cellular call, you will have one call active and another call on hold. Toggle between the two calls by using .

- To ignore the call, press OK to select **Ignore** on the screen.

Placing calls

There are three placing call situations:

- Placing a T2T call while on a cellular call
- Placing a cellular call while on a T2T call
- Placing a T2T call while on a T2T call

These placing call situations may occur while you are engaged in an active T2T or cellular call and you want to originate a new T2T or cellular call, without ending the original call.

Note: The new T2T or cellular call now becomes the active call, and the original T2T or cellular call is placed on hold.

---

1. While on the first call, press OK to select **Menu**. Make selections to place a T2T or cellular call.

Note: Due to technical constraints, you cannot toggle between the two calls using .

2. Ask the party on the new call placed to hang up when finished talking.
3. Your phone then returns to your original cellular or T2T call.

Audio requirements for multiple calls

At times you will be engaged in a T2T call (using the speakerphone) when you receive a “Call Waiting” call. Or, you may be engaged in a cellular call (using the earpiece) when a T2T “Call Waiting” call comes in.

Call waiting tone

In all call situations, the Call Waiting tone (two rapid beeps) is played using the speaker and volume level that matches the initial active call. For example, when you are engaged in a call using the earpiece, the Call Waiting tone is played over the earpiece regardless of whether the new call is a cellular or T2T call.

Multiple calls active

When you accept a Call Waiting call, the following rules determine whether the phone uses the earpiece or the speakerphone for audio delivery.

- If you are engaged in a T2T call and the phone is closed, audio is always presented using the speakerphone.
- If the phone is open, both calls are presented using the speaker that is being used for the first call. For example, if the first call is using the earpiece speaker, then the second call will also use the earpiece speaker.
- When there are multiple active calls and the phone is open, you can press to manually toggle the speakerphone ON or OFF for both calls. In all cases, both of the active calls are affected when is pressed.

3 MAKING AND ANSWERING CALLS

Making a call

1. Look for the symbol on the home screen.

   Note: The more bars you see in this symbol, the clearer the reception will be. If there are no bars, try moving to a location where the reception is better.If your phone cannot locate a signal for 15 minutes, it changes to Power Save mode. If you see the text “Power Save Mode” and on the screen, press any key to return to normal operating mode.

2. Slide the phone open and enter the phone number.
3. Press .
4. Press to end the call, or slide closed.

Redialing a number

To redial the last number called, press three times. If you see or hear a message prompting you to speak a name, press again.

Calling a saved number

If you have already saved a phone number, you can use the Contacts list to find it quickly. (For more about contacts, see page 54.)

1. From the home screen, press down. This brings up a list of all saved contacts.
2. Scroll down the list, find the contact you want, and press to dial the number.

Tip: To make calls using your phone's voice recognition feature, see page 94.

Answering a call

When a cellular call comes in, the phone rings, vibrates, and/or lights up, and an animated graphic appears. The phone number of the caller also appears if not restricted. If the number is stored in your Contacts directory, the contact name appears.

- To answer the call, slide open and press .
- If you do not wish to answer, press with or without sliding the phone open. This silences the ringer or ceases the vibration. You can also press up or down. Either action sends the caller to voicemail if you do not pick up the call.

Note: If you have not enabled voicemail for your phone, this action terminates the call.

- To place the caller on hold momentarily until you can answer, slide open, press ◯ right, and press OK to select **Hold Call**. This plays a recorded message from you telling the caller he/she is on hold. When you are ready, press OK to select **Answer**.

Note: Before you can place calls on hold, you must first record a message and enable the Hold Call feature. See “Setting the phone to hold calls.”

Setting the phone to hold calls

The Hold Call setting allows you to place incoming calls on hold until you are ready to answer them.

To enable your phone to place calls on hold:

1. Select **Menu** → **Settings** → **Convenience** → **Hold Call**.
2. Select **Enabled**.
3. If you have not recorded a hold message, you are prompted to record one.

   Example: “Please hold. I’ll answer in a minute.”
4. Record the message twice, as prompted.

5. Select **Save**, **Play**, or **Exit**.

The next time a call comes in, you have the option of placing it on hold.

Placing an incoming call on hold

You can place a call on hold once you have enabled the feature.

Note: If you are already on a call and you receive another call, you cannot place the incoming call on hold. It goes to voicemail.

To place a call on hold:

1. When a call comes in, press right and press OK to select **Hold Call**. The caller is placed on hold and hears your recorded hold message.
2. To speak to the caller, select **Answer**.

Changing the hold message

To change your hold message:

1. Select **Menu** → **Settings** → **Convenience** → **Hold Call** → **Re-record Msg**. and follow the prompts.
2. Select **Save**, **Play**, or **Exit**.

Setting Open to Answer

The default setting on your phone requires you to slide it open and press to answer an incoming call. You can set the phone to answer as soon as you open it.

1. Select **Menu** → **Settings** → **Convenience** →**Open to Answer**.
2. Select **Enabled**.

Calling Emergency services

Note: Regardless of your three-digit emergency code (911, 111, 000, 999, etc.) your phone will operate as described below.

- Dial your emergency code and press .

You can call the code even if your phone is locked or your account is restricted. When you call, your phone enters **Emergency mode**. This enables the emergency service exclusive access to your phone to call you back, if necessary. To make or receive regular calls after dialing the code, you must exit this mode.

To exit Emergency mode

When you have completed the emergency call:

1. Press OK to select **Exit**.
2. Press OK again to confirm your choice.

The phone returns to the home screen and you are ready to make and receive regular calls.

Note: To determine who has access to your location, see “Setting position location” on page 92.

Using your phone in an airplane

Note: Please check with uniformed crew personnel before operating your phone in Airplane mode.

While in an airplane, it is normally required that you turn off your mobile phone, because it emits RF signals that interfere with air traffic control. You can, however, keep your phone powered on if you set it to Airplane mode.

In Airplane mode, your phone does not emit RF signals. You cannot make or receive regular phone calls, send text messages, or use the Web, but you

can use the Scheduler and other tools, set the clock, and make emergency calls to designated emergency services.

To set Airplane mode:

1. Select **Menu** → **Settings** → **Convenience** → **Airplane Mode**.
2. At the message, press OK.
3. Press OK to select **Enabled**.
4. Press up or down to set the time if necessary. Press right or left to move the cursor. Press OK to select **Next**.
5. Set the date if necessary, then press OK to select **Done**. The text “Phone Off” now appears at the top of the home screen.

Dealing with missed calls

When you have missed a call, “ **Missed**” appears on your screen.

- To view the caller’s number or name, select **Missed Calls**. In the Missed Calls list, the call is indicated with a flashing .
- Press OK or to clear the screen.

- If the caller left a voicemail message, select **Call**. If you have not yet set up your voicemail, callers cannot leave a message. For help setting up voicemail, see page 38.

Setting missed call alerts

You can set an alert to beep every five minutes after you have missed a call.

- Select **Menu** → **Settings** → **Sounds** → **Missed Call Alert** → **Enabled**.
- To turn off the alert when it rings, press OK or .
- To cancel the alert, select **Menu** → **Settings** → **Sounds** → **Missed Call Alert** → **Disabled**.

Viewing recent call details

Details on the last 29 standard and T2T calls you made or received are stored in the Recent Calls list.

Viewing recent calls

1. Select **Menu** → **Recent Calls**.
2. Select **All Calls, Incoming Calls**, **Outgoing Calls**, or **Missed Calls**.
3. Select a recent call item.

4. Select an option:
   - **Number**—Show the caller's number (for an incoming call) or the number you called.
   - **Prepend**—Place the cursor at the beginning of the phone number so you can add an area code.
   - **Save New**—Save the phone number as a contact.
   - **Add to**—Add the phone number to a saved contact.
   - **View Contact**—Show details on the contact if the caller's information is already in your Contacts directory.

Note: If the number was saved as "secret," you must enter your four-digit lock code to view or edit it. For information on the lock code, see "Changing your lock code" on page 84. To classify a phone number as secret, see "Saving a contact entry" on page 48.

Erasing recent calls

1. Select **Menu** → **Recent Calls** → **Erase Recent Calls**.
2. Select an option: **All Calls, Incoming Calls**, **Outgoing Calls**, **Missed Calls**, or **Erase All**.
3. Press OK to select **Yes**.

Speed dialing

Note: Before you can use speed dialing, you must save a phone number as a contact and assign it a speed dial location.

- To save a phone number as a new contact and add a speed dial location, see “Saving a contact entry” on page 48.
- To add a speed dial location to a saved contact, see “Editing a phone number” on page 52.

Using speed dialing

To call a contact that has a speed dialing location:

- From the home screen, enter a one- or two-digit speed dialing location and press .

Enabling 1-Touch Dialing

1-Touch Dialing is the fastest way to speed dial a contact that has a speed dial location.

1. Select **Menu** → **Settings** → **Convenience** → **1-Touch Dialing** → **Enabled**.
2. Press .

Using 1-Touch Dialing

From the home screen, press and hold a speed dialing location. If it is a two-digit location, press the first digit briefly, then press and hold the second digit. For example, if the speed dialing location is 15, press 1 briefly, then press and hold 5 JKL.

Setting up voicemail

Before your phone can receive voicemail messages, you must set up a password and record a personal greeting with Alltel. When you have set up your voicemail, all unanswered calls to your phone are automatically transferred to voicemail, even if your phone is in use or turned off.

1. From the home screen, press and hold 1.
2. Enter your passcode, which you obtain from Alltel.
3. Follow the system prompts to create a password and record a greeting.

Note: If you are having trouble accessing your voicemail, contact Alltel.

Checking voicemail messages

When a voice message is received, your screen displays a notification: “New Message [x] Voicemail.” This text remains for about five minutes. The ✉ symbol flashes if the message is urgent.

If you see “New Message” on your screen

1. Press OK to select **Voice**. This initiates a call to your voicemail number.
2. Follow the prompts to retrieve the message. For specific information on getting voicemail messages, contact Alltel.

If you see the ✉ symbol

1. Press 1✉@ to initiate a call to your voicemail number.
2. Follow the prompts to retrieve the message.

Note: You can set the phone to remind you that you have voicemail. For more information, see “Setting message alerts” on page 88.

Silencing an incoming call

To silence the ringer on an incoming call, briefly press . Then press to answer the call. This action silences the current call only. The next call rings as normal.

Adjusting the volume during a call

To adjust the earpiece volume during a call, press up or down.

Using the speakerphone

- To turn the speakerphone on, press .
- To answer an incoming call and turn speakerphone on at the same time, press .
- To turn speakerphone off, press .

Adjusting speakerphone volume

1. Select **Menu** → **Settings** → **Sounds** → **Spkrphone Volume**.
2. Press up or down to adjust volume.
3. Press to save the new setting.

Receiving data or faxes

Your phone may be able to receive certain data or faxes, depending on the system sending the information. To receive data or faxes, connect the phone to a laptop or PC (see page 89), and switch the phone from voice mode to data/fax mode.

Note: You cannot receive voice calls while the phone is in data/fax mode.

Roaming

Setting an alert for roaming

Depending on services available from Alltel, you can use this setting to make the phone alert you when you roam outside your home service area.

1. Select **Menu** → **Settings** → **Network** → **Roam/Svc Alert**.
2. Select an option and press OK.
   - **Disabled** does not alert you when you roam outside your home service area.
   - **When no svc** alerts you with three tones decreasing in pitch when service is lost and three tones increasing in pitch when service is acquired again.

- **Roam Change** alerts you with two tones decreasing in pitch when roaming service is acquired and three tones increasing in pitch when home area service is acquired again.
- **Any Change** alerts you with three increasing tones if there is a change in roaming service or three decreasing tones if the phone loses service.

Setting the roam ringer

You can set a ringer to indicate when an incoming call is subject to roaming charges.

1. Select **Menu** → **Settings** → **Sounds** → **Roam Ringer**.
2. Highlight **Enabled**. You hear a sample of the ringer.
3. Press OK to set the ringer.

Using a headset

If you are using a headset equipped with a button, press the button to answer or end a call. If the headset has no button, press to answer a call and press to end it. Headsets are sold separately.

4 ENTERING LETTERS, NUMBERS, AND SYMBOLS

You may enter letters, numbers, and symbols in contacts, text messages, and other functions; for example, when you create a personal banner for your phone's home screen.

Understanding text entry screens

The current text entry mode (and capitalization setting, when applicable) are indicated by icons.

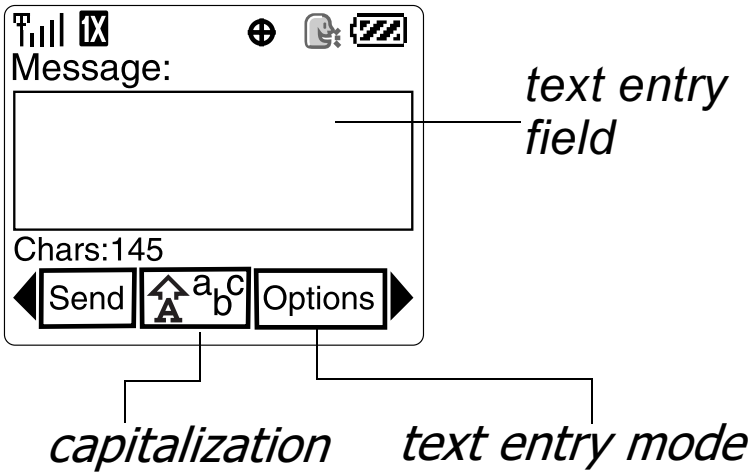

Text entry modes

There are four text entry modes:

- abc Normal text mode
- 123 Number mode
- eZi Rapid text entry mode
- &?! Symbol mode

Note: The mode you start in depends on the task you are doing. For example, when entering a phone number, you're in number mode. When entering a name for a contact, you're in normal text mode. See "Changing modes" on page 46.

Entering numbers

- To enter a number while in 123 mode, press a number key once.
- To enter a number while in abc or eZi mode, press and hold a number key until the number appears on the screen.

abc Entering words letter by letter

Use normal text mode to enter letters.

1. Press a key once for the first letter on that key, twice for the second letter, and so on. If your phone is set to Spanish, French, or Portuguese, accented characters are available.
2. Wait for the cursor to move right and enter the next letter.
3. To enter a space, press #.

eZi Entering words quickly

When you press a series of keys using eZi mode, eZi checks its dictionary of common words and guesses at the word you are trying to spell.

1. For each letter of the word you want, press the key once. For example, to enter the word “any” press: 2 ABC → MNO 6 → WXYZ 9.
2. If the word does not match what you want, press NEXT to look at other word matches.
3. When you see the word you want, press # SPACE.

&?! Entering symbols

While entering text, you can enter symbols by pressing 1 @ until you see the symbol you want. Using this method, you have access to the following symbols:

. @ ? ! - , & : ’

To access the full set of symbols:

1. Press right to highlight the current mode and press OK to enter the menu.
2. Select &?! **Symbols**.
3. Press down to view the list of symbols.
4. Press the number key corresponding to the symbol you want.

Changing modes

Sometimes you need to change modes. For example, to enter numbers in an email address while in abc mode, change to 123 mode, enter the number, and then change back to abc mode to complete the address.

To change text entry modes, press right or left to highlight the current mode and press OK to enter the Text Mode menu.

To change capitalization, press right or left to highlight the current mode and press * SHIFT until the icon for the setting you want appears. Three capitalization settings are available in abc and eZi modes:

- A Capitalize first letter of every *word* (in a contact) or *sentence* (in a text message)
- a Enter text in lower case only
- A Capitalize every letter

Quick reference to text entry

This table summarizes how to enter letters, numbers, and symbols.

To...	Do this...
Enter a letter	Use abc mode and press a key until you see the letter you want.

Enter a number	Use 123 mode and press a key once to enter its number.
Enter a symbol	Use abc mode and press 1@ until you find the symbol you want.
Enter a space	Press #.
Erase a character	Press CLR.
Erase all characters	Press and hold CLR.
Move the cursor right or left	Press up or down.
Change text entry modes	Press and hold *.
Capitalize every letter	In abc mode, press #. Choose A.
Capitalize the first letter	In abc mode, press #. Choose A.
Enter text in lower case only	In abc mode, press #. Choose a.
Highlight an option at the bottom of the screen	Press left or right.

5 STORING CONTACTS

Use your phone's Contacts directory like a set of phone index cards to store information about a person or company. Your phone can hold about 200 contact entries, including T2T contacts (see page 14).

Saving a contact entry

To save a contact, take these steps.

1. From the home screen, enter the phone number you want to save.

   Tip: Enter the area code with the phone number so that you can dial it from any service area.

   Note: To save a contact without entering a phone number, select **Menu** → **Contacts** → **Add New.** Select an option and skip to step 3.

2. Press OK to select **Save New**.
3. Enter a name for the contact. If you need to learn how to enter letters, see page 43.
4. Either save the contact now or assign options.

To save now, press OK to select **Save**.
-or-
To assign options, press ◯ right, then press OK to select **Options**.

Press ◯ up or down to highlight an option:

– **Save**—Save the information and return to the home screen. Always select **Save** after changing a setting or option.

– **Assign Ringer** or **Unassign Ringer**—Select or remove a ringer to identify an incoming call from this contact.

– **Assign Picture** or **Unassign Picture**—Select or remove a picture to identify an incoming call from this contact.

– **Number Type**—Select **work**, **home**, **mobile**, **pager**, or **fax**. The number type appears as an icon next to the number in the Contacts list.

– **Add Voice Dial**—Speak the name of the contact person for this number so you can dial it using voice recognition (VR). For more information, see page 94.

– **Speed Dialing**—Select a speed dialing location from the list.

– **Secret**—Select **Yes** to lock the phone number. If a phone number is locked, you must enter your four-digit lock code (see page 84) to view or edit the number.

– **Primary Number**—Classify the number as the primary number for the contact.

– **Classify Contact**—Classify the contact as **Personal**, **Business**, or **Neither**. (See page 76 to set the phone to ring differently for personal and business calls.)

5. After assigning options, press OK to select **Save**.

   A check mark and the text “Contact Successfully Saved!” appear.

6. Press ⏻ to return to the home screen.

Adding a code or extension

When you save the phone number of an automated service, you may include a pause where your phone would stop dialing, for example, where you would wait to dial an extension.

1. Enter the first portion of the phone number.
2. Press ◯ right to scroll through the options at the bottom of the screen.
3. Press OK to select a type of pause.

– ⏱ A **Time Pause**—Stops dialing for two seconds, then continues to dial.

– ✦ A **Hard Pause**—Stops dialing until you select **Release**.

4. Enter the remaining numbers.
5. Select **Save New** and enter the contact name.

Adding a plus sign for international calling

Depending on services available from Alltel, you can save contact phone numbers with a plus sign so that you do not need to enter an international access code.

1. As you enter the phone number in a contact, press and hold NEXT to enter a “+”.
2. Enter the local area code and phone number.

If you save the number with a +, you should be able to call the contact from any country that supports “plus” dialing.

Editing or erasing a contact

To make changes to a contact, take these steps. (To erase all saved contacts, see page 87.)

1. Select **Menu** → **Contacts**.
2. Select **View Phone List** or **Find Name** to find the contact you want to edit.
3. Highlight the contact to edit and press OK.

4. Select **Options**.
5. Highlight an option and press OK to select it:
   - **Add New** to add a phone number, email address, street address, Web page URL, or note to the existing contact.
   - **Assign Ringer** or **Unassign Ringer** to select or remove a ringer to identify an incoming call from this contact.
   - **Assign Picture** or **Unassign Picture** to select or remove a picture to identify an incoming call from this contact.
   - **Erase Contact** to erase the entire contact.
   - **Edit Name** of the contact.
   - **Classify Contact** as personal or business.
6. Enter the new information.
7. Press OK to select **Save**.

Editing a phone number

1. Select **Menu** → **Contacts**.
2. Select **View Phone List** or **Find Name** to find the contact you want to edit.
3. Highlight the contact to edit and press OK.

4. Press down to highlight the phone number you want to edit and press OK.
5. Highlight an option for the phone number and press OK.
   - **Send Text Msg**—Send a text message to the phone number you selected.
   - **View Number**—See the phone number you selected.
   - **Add Voice Dial**—Speak the name of the contact person for this number so that you can dial it using voice recognition (VR). For more information, see page 94
   - **Speed Dialing**—Select a location that you can use to speed dial the number.
   - **Edit Type**—Assign a type: **work**, **home**, **mobile**, **pager**, or **fax**. The type icon appears next to the phone number in the Contacts list.
   - **Erase Number**—Erase the number from the contact.
   - **Erase Voice Dial**—Erase the voice dial name associated with the number.
   - **Edit Number**—Change the phone number.
   - **Edit Voice Dial**—Record a new voice dial name.

- **Secret**—Make the number secret, so that when someone opens the contact, the phone number does not appear until the lock code is entered. Secret numbers can be called, however, without a lock code. (For more information, see “Restricting calls” on page 87.)
- **Primary Number**—Make this number the first one that shows up when you open the contact.
- **Prepend**—Place the cursor at the beginning of the phone number to add an area code.
- **Exit**—Return to the home screen.

Finding contact information

To find a phone number or contact, either (1) check the frequent contacts list, (2) search the Contacts directory, or (3) use Fast Find.

Checking the Frequent List or the All Contacts List

From the home screen, press ◯ down to see the last 15 of your most frequently called contacts. Note that you must enable this feature.

To enable the Frequent List setting

1. Select **Menu** → **Settings** → **Convenience** → **Frequent List**.

2. Select **Enabled**.

Tip: You can use the keypad to enter the first letter of the contact's name to skip quickly down the list.

Searching the Contacts directory

1. Select **Menu** → **Contacts**.
2. Select a search method:
   - **View Phone List**—List all saved contacts.
   - **Find Name**—Locate a specific name. Enter part of the contact name, then select **Find**.
   - **Speed Dial List, Voice Dial List, Business List,** or **Personal List**—Select a contact from a list.
3. Scroll down until you find the name you want, then press OK.
   - To call the contact, select the number and press .
   - To display the full contact, press OK.

Setting Fast Find

With Fast Find enabled, press one or two keys to view close matches of the name you are looking for.

1. From the home screen, select **Menu** → **Settings** → **Convenience** → **Fast Find**.
2. Select **Enabled**.

When you use Fast Find, speed dial locations appear before names if they use the same keys.

6 SENDING AND RECEIVING TEXT MESSAGES

This chapter describes how to send, receive, and erase text messages from your phone. For information on voicemail messages, see page 38.

Important: The features and menus described in this chapter may vary depending on services available in your area. In addition, usage charges may apply to each message. For details, check with Alltel.

Sending text messages

You can only send text messages to phones capable of receiving them, or to email addresses.

Sending a simple message

To send a text message to a single recipient:

1. Select **Menu** → **Messages** → **Send New**.
2. Choose a method to enter the recipient's phone number or email address:

– Select a saved number from the **Recent List** or **Contacts List or select** a **Group List** you have created. For more about group lists, see page 69.

– Enter a **New Address** manually. To learn how to enter text, see page 43.

3. To add another recipient to this message, choose a method:

– Press right to select **Options**. Then select **Recent List**, **Contacts**, **or Group Lists**.

– Enter a space or comma after the first number. Then enter another recipient manually.

Note: You can send a message to up to 10 contacts at once. The messages will be sent one at a time, once to each addressee.

4. When you have finished entering addresses, press right to highlight **Next** and press OK.

5. Enter the message. To learn how to enter text, see page 43.

6. When you have completed the message, you can send it immediately or set sending options. To send it immediately, press OK to select **Send**. To set sending options, see the following procedure.

Setting sending options

When you are ready to send a message, you have several options for how and when you want the message to be received.

1. Once you have completed the message, press right to highlight **Options** and press OK. Then choose from the list:
   - **Insert...**—Enhance your message with smiley faces or prewritten text.
   - **Emoticons**—Select a smiley face icon by pressing the key corresponding to the icon's number. If the recipient's phone does not support the same technology as your phone, the icons appear to them in a simplified form.
   - **AutoText**—Select a prewritten message. Highlight one from the list and press OK to insert it. (To edit or create new prewritten messages, see page 70.)
   - **Add Address**—Return to the "To" screen to add another recipient without losing the message text. Enter the new address, then select **Next** to return to the message entry screen.
   - **Msg Receipt**—Request notification when the message has been received. (**Note:** Msg Receipt works only if the "Save to Outbox" setting is enabled. To check this setting, see page 62.)
   - **Set Priority**—Label the message as "Urgent."

- **Callback Number**—Include a callback number with the message to let the recipient know the number at which you can be reached. Select **Yes** to include your own number, or **Edit** to enter a different callback number.
- **Send Later**—Schedule when to send the message.
- **Save Message**—Save the message in your **Saved** folder. This prevents the message from being deleted if you have activated AutoErase, and enables you to send the message to others.
- **Save AutoText**—Save the message you have just entered as a prewritten message, then return to the message entry screen so you can send the message.

2. When you have finished setting options, press CLR to return to the message window.
3. Highlight **Send** and press OK.

Adding a signature

You can create signature text that will be added to the end of your outgoing messages.

1. Select **Menu** → **Settings** → **Messaging** → **Signature**.
2. Enter the signature text.

3. Press OK to save the signature.

   The signature is now included in all of your outgoing text messages. You will not see the signature on the message screen.

Note: The signature text is counted as characters in your messages. Text messages have a predetermined character limit.

Sending a saved message

1. Select **Menu** → **Messages** → **Saved**.
2. Press up or down through the list of messages and press OK to select one.
3. Highlight an option and press OK:
   - **Resume**—Modify or send the message.
   - **Send To**—Add another recipient.
   - **Erase**—Erase the saved message.
   - **Done**—Return to the Saved folder.
4. When you are done entering addresses, highlight **Next** and press OK.
5. To send the message as it is, press OK to select **Send**.

Note: To set additional options, press right, select **Options**, and choose from the options. When finished setting options, press CLR to return to the message window, then select **Send**.

If you cannot send messages

You may not be able to send or receive messages if your phone's memory is nearly full, or if service is not available at the time. To free up memory, erase old messages. See "Erasing messages" on page 67.

Receiving incoming calls while creating messages

- If you don't want to answer the call, select **Ignore**.
- To answer the call, press . The message you were working on is saved in the **Saved** folder. To return to the message, select **Menu** → **Messages** → **Saved** and select it.

Viewing the OutBox

You can check the status of messages you have sent as long as they are saved to the OutBox.

Note: If messages you have sent were not saved to the OutBox, select **Menu** → **Messages** → **Msg Settings** → **Save to OutBox** → **Enabled**.

To view the OutBox:

1. Select **Menu** → **Messages** → **OutBox**.
2. Press ◯ up or down through the list of messages. One of the following symbols appears next to each message:

⧗	The message is pending and will be sent when possible. You can cancel delivery of the message.
🕒	The scheduled message will be sent at the scheduled time. You cannot cancel delivery of the message.
✕	The message cannot be sent because service is not available. An alert appears on your phone if the message cannot be sent.
☑	The scheduled message has been sent and will be delivered as scheduled. You cannot cancel delivery of the message.
☑	The message was received by the recipient you specified.
☑	The message was received and opened by the recipient you specified. (This symbol may not be available. Check with Alltel.)
🗐	The message was sent to more than one recipient.
☐	The message was never sent, or was not sent since it was last modified. You can cancel delivery of the message.

Retrieving text messages

When a text message is received, your screen displays an alert similar to: “New Messages 1 Text Msg(s)”. This alert remains for about five minutes. After that, look for the ✉ symbol at the top of your screen. The symbol flashes if the message is urgent.

If your phone is set to Direct View, the body of the message appears on the screen automatically. (To activate Direct View select **Menu** → **Messages** → **Msg Settings** → **Direct View** → **Enabled**.)

Note: Messages do not appear on the screen if the phone is in use.

If you see the “New Message” note

You can choose to:

- **View** the message—Press OK.
- **Ignore** the message—Press ◯ right and press OK.
- Clear the screen—Press ⏻.

If you see the body of the message

The body of an incoming message appears on your home screen only if your phone is set to Direct View. See above to set Direct View.

You can choose to:

- **Ignore** the message—Press .
- **Read** the message—See “Reading the message”.

Note: If you receive a new message while you are reading a message, the one you are reading is replaced by the new one. You can find the older message in the InBox: Select **Menu** → **Messages** → **InBox**.

If you see the symbol

If the symbol is flashing, the message is urgent.

1. Select **Menu** → **Messages** → **InBox**.

   A list of all your received messages appears.

   New, unread messages appear in **bold**.
2. Press up or down to scroll through the list of messages.
3. press to read a message.

Reading the message

The options available to you may vary. Check with Alltel.

Note: Sounds embedded in text messages do not play if the phone is set to Silent Mode.

---

1. If the text message is long, press down to view the entire message.

   Note: Message length is limited by Alltel. An incoming message that exceeds the limit may be truncated.

2. When you are finished, you can **Reply** to the sender, **Play** the sound embedded in the message, **Erase** the message, **Save** the message to your Saved folder, or set additional **Options** for the message:
   - View **Sender** information.
   - **Forward** the message.
   - **Reply with Copy** to reply to the message with a copy of the original attached.
   - **Save Object(s)**, such as sound or pictures, from the message. (This option is available if the incoming message includes a graphic or sound.)

- **Save Contact** to save the sender's phone number or email address in your Contacts list. (This option is available if a vCard is included in the message.)
- **Save as AutoText** to save the text from the message as AutoText, which you can insert into other messages. Graphics and sound are not saved as part of AutoText. (For more about AutoText, see page 70.)

3. Select **Done**.

Note: The ☒ symbol indicates that part of the message did not come through. It may be a graphic that is too large or incorrectly formatted.

Setting message alerts

You can set your phone to alert you of incoming text messages or pages. For more information, see "Setting message alerts" on page 88.

Erasing messages

It is a good idea to erase old messages, as messages take up memory in your phone.

You have the option of erasing text messages and pages as you send or read them, erasing them individually from the list in the OutBox or InBox, or erasing them all at once.

Erasing single messages

1. Select **Menu** → **Messages**.
2. Press ◯ down and press OK to select the type of text message you want to erase (**InBox**, **OutBox**, or **Saved**).
3. Press OK to select the message to erase.
4. Select **Erase** to erase the message. A notification appears: “Erase this message?”
5. Select **Yes** to erase the message.

Note: You can erase a scheduled message from the OutBox, but you cannot cancel delivery of the message.

Erasing all messages

1. Select **Menu** → **Messages** → **Erase Msgs**.
2. Press ◯ up or down and press OK to select an option:

- **InBox** erases all messages in your InBox.
- **OutBox** erases all messages in your OutBox.
- **Saved Folder** erases all messages in your Saved folder.
- **All Messages** erases all text messages in all folders listed above.

3. A notification appears: “Erase all messages?” Select **Yes** to erase messages or **No** to cancel.

Erasing messages automatically

Use this setting to have old messages automatically erased from the InBox when memory is low.

- Select **Menu** → **Messages** → **Msg Settings** → **Auto-Erase** → **Old InBox Msgs**.

Customizing message settings

To make messaging easier, you can customize settings for sending and receiving messages.

Creating group lists

You can create and save a list of multiple recipients. Your Slider phone stores five group lists with up to 10 recipients per list.

1. Select **Menu** → **Messages** → **Group Lists** → **Create New**.
2. Enter a name for the list. For help entering text, see page 43.
3. Press OK to select **Next**.
4. To enter the first phone number or email address, select an option:
   - **Recent List**—Select numbers from your Recent List.
   - **New Address**—Enter the phone number or email address yourself. To learn how to enter text, see page 43.
   - **Contacts List**—Select contacts from your phone book.
5. To enter the next address, enter a space or comma after the first number or email address. (If you insert a saved contact or a number from the Recent List, the phone inserts the comma automatically.) Then press right twice, select **Options**, and choose from the options.
6. When finished, press right and press OK to select **Done**.
7. To send a message to your new group, see “Sending text messages” on page 57.

Creating and editing prewritten messages (AutoText)

Your phone comes with prewritten (AutoText) messages, such as “Please call me,” which you can insert into the body of a text message. You can edit

these messages and create new ones. Your phone stores up to 20 AutoText messages, with up to 100 characters per message.

1. Select **Menu** → **Messages** → **Msg Settings** → **Edit AutoText**.
2. To create a new pre-written message, highlight **New AutoText** and press OK.

   -or-

   To edit an existing pre-written message, highlight the message and press OK.
3. Enter or edit the text and press OK to select **Done**. For help entering text, see page 43.

Note: You can also save a message you are writing or an incoming message as AutoText. For directions, see page 60 and page 67.

Switching default text entry mode

You can set the default text entry mode for text messaging.

1. Select **Menu** → **Messages** → **Msg Settings** → **Default Text**.
2. Select **Normal Alpha** or **Rapid Mode**.

For more information on text entry modes, see page 43.

7 CUSTOMIZING YOUR PHONE

The contents of the **Settings** menu are as follows.

Silent Mode

Vibrate Only, Vibe then Ring, Lights Only, Normal Sounds

Sounds

Ringer Volume, Ringer Type, Slide Open, Slide Close, Business Call Ring, Personal Call Ring, Roam Ringer, Earpiece Volume, Key Volume, Key Length, Missed Call Alert, Smart Sound, Minute Alert, Spkrphone Volume

Display

Backlighting, My Banner, Main Menu View, Wallpaper, Screen Saver, Color Themes, Auto-Hyphen, Language, Time Format, Contrast

Voice Services

Add Voice Dial, Erase Voice Dial, Voice Training, Voice Wake-Up, Voice Answer, Expert Mode

Security

Lock Phone, Limit Calls, Lock Code, Erase Contacts, Emergency #’s

Call Information

Recent Calls Timer, All Calls Timer

Network

Data/Fax Calls, Privacy Alert, Data Setup, User Name, Set Phone Line, Roam/Svc Alert, Roam Option, Digital/Analog, Location

Convenience

Airplane Mode, Shortcut Key, Fast Find, Frequent List, Hold Call, 1-Touch Dialing, Web Prompt, Call Guard, Open to Answer

Messaging

Voicemail Number, Alerts, Signature, Edit AutoText, Callback Number, Msg Receipt, Direct View, Save to Outbox, Auto-Erase, Default Text

Accessories

Pwr Backlight, Headset Ring, Auto-Answer, Com Speed, TTY Device, Close to END

Silencing all sounds

Your phone is set to make sounds when you receive calls, press keys, navigate through menus, and receive alerts (such as new messages).

You can silence all sounds and set the phone to vibrate or light up when you receive calls and alerts.

Setting the phone to vibrate or light up

1. Select **Menu** → **Settings** → **Silent Mode**.
2. Choose an option and press OK.
   - **Vibrate Only**—Causes the phone to vibrate for the duration of the incoming call or other alert.
   - **Vibe then Ring**—Causes the phone to vibrate for the first 10 seconds and then ring for the remainder of the incoming call alert.
   - **Lights Only**—Causes the screen and keys to light up and flash for the duration of the incoming call or other alert.
3. Press ⏻ to return to the home screen.

Note: The phone will ring when attached to an external power source (such as a charger), even if Silent Mode has been activated.

Shortcuts to Vibrate Only mode

- From the home screen, press ◯ right and hold.

  -or-

- Press # SPACE and hold.

Turning sounds back on

To restore all sounds to the phone:

- From the home screen, press right and hold.

  -or-

- If in Vibrate Only mode, press # and hold.

  -or-

- Use menus:

  a. Select **Menu** → **Settings** → **Silent Mode**.

  b. Select **Normal Sounds** and press OK.

Choosing a different ringer

Your Slider phone has several ringers you can choose from for your incoming calls.

1. Select **Menu** → **Settings** → **Sounds** → **Ringer Type**.
2. Scroll down the list to hear the different rings.
3. Press OK to select a ringer from the list.

Specifying ringers for different callers

You can assign ringers that identify calls from different phone numbers saved in your Contacts directory.

- To assign a ringer to an individual contact, or to classify a contact as business or personal see page 49.
- To assign a ringer to a class of contacts:
  a. Select **Menu** → **Settings** → **Sounds**.
  b. Highlight **Business Call Ring** or **Personal Call Ring** and press OK.
  c. Select a ringer from the list and press OK.

Importing additional ringers

You can import additional ringers into your Slider phone using the Kyocera Phone Desktop software (sold separately). To purchase this software and other accessories, visit **www.kyocera-wireless.com/store**.

You may be able to download ringers over-the-air. Check with Alltel for availability.

Adjusting volume

Adjusting the earpiece volume

To adjust the earpiece volume manually during a call, press up or down to find a comfortable level.

Adjusting the ringer volume

1. Select **Menu** → **Settings** → **Sounds** → **Ringer Volume**.
2. Press right to increase the volume, or left to decrease the volume.

The ringer volume also adjusts the volume for the Countdown Timer, Scheduler Alert, Alarm Clock, and the ringer volume for incoming data/fax calls.

Adjusting the speakerphone volume

To adjust the speaker volume:

1. Select **Menu** → **Settings** → **Sounds** → **Spkrphone Volume**.
2. Press up or down to adjust volume.
3. Press to save the new setting.

Changing the key tones

You can change the volume and duration of the tones the phone makes when you press the keys. Select **Menu** → **Settings** → **Sounds** and choose **Key Volume** or **Key Length**.

Using shortcuts

From the home screen, you can access shortcuts by pressing the navigation key in different directions.Four shortcuts are programmed into the navigation key. Left opens the Web Browser. Right silences all sounds. Down accesses your Contacts directory. The fourth direction (up) is pre-set to open the “My Availability” menu for T2T calling (see page 17), but you can change it to a shortcut of your choosing.

Redefining the “up” feature shortcut

1. Select **Menu** → **Settings** → **Convenience** → **Shortcut Key**.
2. Highlight the feature to which you want a shortcut, and press OK to select it.

Using the “up” feature shortcut

- From the home screen, press and hold up.

Creating a shortcut to your frequent contacts list

By default, your phone lists your entire Contacts directory when you press down from the home screen. You can set the phone also to list your most frequent contacts.

1. Select **Menu** → **Settings** → **Convenience** → **Frequent List**.
2. Select **Enabled** to include the list or **Disabled** to remove it.

Using the Frequent Contacts shortcut

- From the home screen, press down. The Frequent Contacts appear at the top of the list, followed by your complete Contacts directory.

Choosing a different language

Your phone may display alternative languages.

1. Select **Menu** → **Settings** → **Display** → **Language**.
2. Highlight a language and press OK.

Personalizing the screen

Changing your banner

The banner is the personal label for your phone. It appears on the home screen above the time and date. The banner can be up to 14 characters long.

1. Select **Menu** → **Settings** → **Display** → **My Banner**.
2. Select **Edit**.
3. Press CLR to clear the screen.
4. Enter your new text. (To learn how to enter text, see page 43.)
5. Press OK to save.

Choosing a different menu view

You can change the appearance of the menus you see when you select **Menu** from the home screen.

1. Select **Menu** → **Settings** → **Display** → **Main Menu View**, then the option you want, **Graphic** or **List**.
2. Press ⏻ to return to the home screen. The next time you press OK, you will see the menu view you selected.

Adjusting the backlighting

Your screen lights up while you are in a call or when you press a key on the keypad. However, you can change when and how backlighting lights up.

1. Select **Menu** → **Settings** → **Display** → **Backlighting** → **Duration**.
2. Select an option from the list:
   - **Off**—Turns backlighting off.
   - **5 seconds**, **10 seconds**, or **30 seconds**—Turn backlighting on for 5 seconds (default), 10 seconds, or 30 seconds after the last keypress.
   - **5 sec & in call**, **10 sec & in call**, or **30 sec & in call**—Turn backlighting on for the duration of a call, and for 5, 10, or 30 seconds after your last keypress. **Note:** These three settings drain the battery more quickly and reduce talk and standby times.

Using Power Save mode

You can conserve battery life by activating Power Save mode to dim the backlight set in the procedure above. The backlighting appears for the selected duration but is less bright than with Power Save off.

1. Select **Menu** → **Settings** → **Display** → **Backlighting** → **Pwr Save Mode**.
2. Select **On**.
3. Press to return to the home screen.

Setting power backlighting

You can set backlighting to remain on when an external power source, such as the AC adapter, is used with the phone.

Note: Power backlighting may not be available with some accessories. Check with Alltel.

---

1. Select **Menu** → **Settings** → **Accessories** → **Pwr Backlight**.
2. Select **Always On** to keep backlighting on. (The battery charges more slowly when power backlighting is on.)

Changing the display contrast

1. Select **Menu** → **Settings** → **Display** → **Contrast**.
2. Select the level of contrast you want.

Setting numbers to auto-hyphenate

Auto-hyphenation is a setting that automatically inserts hyphens into your phone numbers to be consistent with the U.S. dialing plan. For example, 1-222-333-4444.

- Select **Menu** → **Settings** → **Display** → **Auto-Hyphen** → **Enabled**.

Selecting a screen saver

Screen savers work only from the home screen, and they are activated 10 seconds after the last keypress. Incoming calls and alerts override screen savers.

Note: Voice services do not work when a screen saver is activated.

---

1. Select **Menu** → **Settings** → **Display** → **Screen Saver**.
2. Highlight a screen saver name and press OK.
3. Press OK to select **Assign**.
4. Press ⏻ to return to the home screen and wait 10 seconds to view the screen saver you chose.

Note: You can add graphics you have created or saved to the Screen Savers list. Refer to “My Pictures” on page 116.

Selecting wallpaper

Wallpaper appears on the home screen when the phone is not in use.

1. Select **Menu** → **Settings** → **Display** → **Wallpaper**.
2. Highlight a wallpaper design and press OK.

3. Press OK to select **Assign**.
4. Press ⏻ to return to the home screen and view the wallpaper design you chose.

Selecting a color theme

1. Select **Menu** → **Settings** → **Display** → **Color Themes**.
2. Highlight a color theme and press OK.

Choosing a different time/date format

1. Select **Menu** → **Settings** → **Display** → **Time Format**.
2. Highlight the option you want and press OK.

Creating a secure environment

This section describes the features involved in securing your phone and preventing access to personal information. All security features are shielded by a four-digit lock code.

Changing your lock code

The lock code is typically 0000 or the last 4 digits of your phone number.

1. Select **Menu** → **Settings** → **Security**.

2. Enter your four-digit lock code and select **Lock Code**. A message appears: “Change Code?”
3. Select **Yes**, enter a new four-digit code. Enter your new lock code again.

Locking your phone

When your phone is locked, you can call only emergency numbers or Alltel’s number. You can still receive incoming calls.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Lock Phone**.
4. Highlight an option:
   - **Never**—Does not lock the phone.
   - **On power up**—Locks the phone every time you turn it on.
   - **Now**—Locks the phone immediately.

Unlocking the phone

1. From the home screen, press OK to select **Unlock**.
2. Enter your four-digit lock code.

Designating emergency numbers

The emergency numbers feature allows you to specify three personal phone numbers that can be called even when the phone is locked.

To designate emergency numbers:

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Emergency #'s**.
4. Highlight an **Unassigned** slot and press OK.
5. Enter the phone number, including the area code. Do not enter 1 before the area code.
6. Press OK to select **Done**.

Notes:

- You can view these numbers only when they're being entered for the first time.
- You cannot edit these numbers.
- To call an emergency number from a locked phone, you must dial the number (including area code) exactly as it was stored in Emergency Numbers.

Restricting calls

You can restrict the calls that can be made from and to your phone.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Limit Calls**.
4. Select **Limit Outgoing** and press OK.

Erasing all contacts

You can erase all contacts from the Contacts directory.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Erase Contacts**.
4. Select **Yes** to erase all contacts. A message appears: “Erase ALL contacts?”
5. Select **Yes** to erase all contacts.

Setting message alerts

You can choose how you want be alerted of incoming voicemail, pages, or text messages.

1. Select **Menu** → **Settings** → **Messaging** → **Alerts**.
2. Select the type of alert: **Message**, **Net**, **Page**, or **Voicemail**.
3. Press OK to select an option:
   - **Disabled**—Turns off message alerts.
   - **Vibrate**, **Beep**, **HiYa!**, **Rock!**, or **Happy**—Set the phone to vibrate, beep, or emit a musical tone once when a new message is received.
   - **Options with remind**—Set the phone to notify you once when a new message is first received and then notify you again every five minutes. To stop a reminder, press OK to select **Ignore**.

Setting alerts for your headset

When a headset (sold separately) is attached to the phone, you can set alerts to originate from the headset.

1. Select **Menu** → **Settings** → **Accessories** →**Headset Ring**.
2. Select **Out of headset** to have alerts originate from the headset.

Network settings

Switching between phone lines

Your phone can have two service accounts, or phone lines, associated with it. Each phone line has its own phone number. When you are using one line, you cannot receive calls from the other. It would be as if the phone were “off” for that number. Your voicemail, however, still takes messages. All contacts and settings are shared for both lines.

Note: Before you can switch between phone lines, you must first establish a second phone line with Alltel. Once it has been established, a second phone number becomes available in the menu for selection.

---

1. Select **Menu** → **Settings** → **Network** → **Set Phone Line**.
2. Select the other line and press OK.

Data settings

Connecting to a laptop or a PC

The Com Speed sets the data rate at which your phone connects to a laptop or PC, or at which it sends and receives over-the-air text messages.

Note: The Slider supports data calls only when the slide is closed.

1. Select **Menu** → **Settings** → **Accessories** → **Com Speed**.
2. Select the speed. The options are: **19.2 kbps**, **115.2 kbps** (default), **230.4 kbps**, and **Other**.

Note: There may be a higher charge for making calls using high-speed data in areas where 1X service is available. Check with Alltel for details.

Connecting to a TTY/TDD device

You can connect the phone to a TTY device for the hearing impaired.

1. Connect the TTY device to the phone.
2. Enter # SPACE # SPACE 8 TUV 8 TUV WXYZ 9 from your keypad.
3. Press OK to select the **TTY** option.

Note: Enable TTY only when using the phone with a TTY device.

Setting the phone to receive data or faxes

Your phone may be able to receive certain data or faxes, depending on the system sending the information. To receive data or faxes, you must connect the phone to a laptop or PC and switch the phone from voice mode to data/fax mode.

To purchase a cable, contact Alltel; call (800) 349-4188 (U.S.A. only) or (858) 882-1410; or shop online at **www.kyocera-wireless.com/store**.

Note: You cannot receive voice calls while the phone is in data/fax mode.

---

1. Connect the phone to the laptop or PC.
2. Set the Com Speed. (See “Connecting to a laptop or a PC” on page 89.)
3. Select **Menu** → **Settings** → **Network** → **Data/Fax Calls**.
4. Press OK to select an option:
   - **Voice Only**—Allow only voice calls.
   - **Fax, next call** or **Data, next call**—Set the phone to fax mode or data mode for the next incoming call or the next 10 minutes.
   - **Fax, until off** or **Data, until off**—Force the phone into fax mode or data mode until the phone is turned off.

Setting position location

This setting allows you to share your location information with network services other than emergency services (911, 111, 000, 999, etc.), in markets where service is implemented.

Note: You do not have the option of turning off the locator to emergency services.

To set your option:

1. Select **Menu** → **Settings** → **Network** → **Location**.
2. If you see a message prompt, press OK to continue.
3. Press OK to select an option:
   - **911 Only** (default) shares your position information only with emergency services when making a 911 call.
   - **Location On** shares your position information with Alltel's network, in addition to emergency services.

For information on emergency calls, see "Calling Emergency services" on page 32.

8 USING VOICE RECOGNITION

Voice recognition allows you to make and answer calls by speaking commands into the phone's microphone.

Note: You cannot use voice recognition to end a call; you must press .

Setting up voice dialing

To make or receive calls using voice recognition (voice dialing), contacts must be saved and have associated voice *tags*.

Creating a voice tag for a contact

1. Select **Menu** → **Contacts** → **Add Voice Dial**.
2. Follow the voice prompts to record a name for the contact.
3. Highlight an option:
   - **Add New**—Save a new contact to go with the voice tag.
   - **Add to existing**—Add the voice tag to a saved contact.

Viewing entries with voice tags

- Select **Menu** → **Contacts** → **Voice Dial List**. A list of all contacts with assigned voice tags appears.

Editing a voice tag

1. Select **Menu** → **Contacts** → **Voice Dial List**.
2. Highlight the contact you want to edit, and press OK to select it.
3. Highlight the phone number and press OK.
4. Select **Add Voice Dial**, **Edit Voice Dial**, or **Erase Voice Dial**.
5. Follow the prompts.

Calling using voice tags

1. If you haven't already done so, record a voice tag for the person you want to call. Open the phone.
2. From the home screen, press .
   The phone responds: "Say a name or say dial."
3. Say the name of the person you want to call.

4. If the name you said matches a contact in the Voice Dial List, the phone responds: “Calling (Name).” Remain silent to make the call, or say “**No**” to cancel.

Note: If there are multiple names saved in the Voice Dial List that match the name you said, you are asked to verify which name you want to call. Say “**Yes**” when you hear the correct name. Say “**No**” when you hear an incorrect name.

5. When you are finished, press . You cannot end the call with a voice command.

Making calls using digit dialing

When using digit dialing, you speak digits to dial a phone number.

Note: You cannot speak a string of digits. You must speak one digit at a time and wait for the prompt.

---

1. From the home screen, press . The phone responds: “Say a name or say Dial.”
2. Say “**Dial**.” The phone responds: “Speak a digit.”
3. Speak the first digit of the phone number you want to call. Once the phone repeats the digit, you can speak the next digit. If you pause, the

phone prompts you with the following five options. After the prompt, speak an option.

–Say "**Clear**" to erase the digit last entered. The phone responds: "Digit cleared." To clear the entire phone number, say "**Clear**" again. When the phone prompts you with "Clear entire phone number?", say "**Yes**" to clear or "**No**" to cancel.

–Say "**Call**" to dial the number.

–Say "**Verify**" to cause phone to repeat the set of digits that you input.

–Say "**Cancel**" to exit voice recognizer and return to the home screen.

–Speak a digit to enter the next digit. Once the phone repeats the digit, you can speak the next digit or pause to hear the prompt.

Making calls using expert mode

Expert Mode substitutes tones for some voice prompts to allow the experienced user to quickly complete certain tasks without having to listen/wait for a voice prompt.

To enable Expert Mode:

1. Select **Menu** → **Settings** → **Voice Services** → **Expert Mode**.
2. Select **Expert**.

To make a call in Expert Mode:

1. Press and wait for the beep.
2. Say the name or the speed dial number of the contact you want to call, or say "**Dial**" and after each beep speak a digit of the phone number.

Using voice features with a hands-free car kit

Note: We do not recommend that you use a hands-free car kit with the Touch2Talk functionality.

You can use voice commands to make a phone call, answer the phone, or ignore an incoming call only if your phone is connected to a professionally installed hands-free car kit (sold separately).

To shop online for hands-free car kits, visit **www.kyocera-wireless.com/store** or call (800) 349-4188 (USA only) or (858) 882-1410.

Waking up the phone

If your phone is connected to an installed Kyocera hands-free car kit, you can use a voice command to activate the phone to make a phone call.

Note: Voice Wake-up does not work when the phone is closed.

To activate the Voice Wake-up setting:

1. Select **Menu** → **Settings** → **Voice Services** → **Voice Wake-Up**.
2. Select **With ext. pwr**.

To wake up the phone:

1. Say "**Wake Up**" and listen for a tone.
2. Say "**Wake Up**" again until you hear two tones.

If the phone does not recognize your "Wake up" command, see "Training voice recognition" on page 100.

Answering the phone

You can set the hands-free car kit to (1) answer automatically or (2) answer using a voice command.

Answering automatically

You can set your phone to answer automatically:

- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **After 5 secs**.

Answering using voice commands

If Auto-Answer is turned off, you can use a voice command to answer an incoming call using the installed hands-free car kit:

- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **Disabled**.

To activate the Voice Answer setting:

1. Make sure the phone is not in Silent Mode. (See page 73.)
2. Select **Menu** → **Settings** → **Voice Services** → **Voice Answer** → **Enabled.**

To answer a call:

When you receive an incoming call, the phone responds: “Incoming call, answer?” or “Incoming roam call, answer?” If the caller is recognized as a contact entry in your phone, then the phone says “Incoming call from (Name), answer?”

- Say “**Yes**” or press any key *except* .

Ignoring an incoming call

To ignore an incoming call, do one of the following:

- Say “**No**” and press to silence the alert.
- Remain silent. The voice alert repeats twice and the phone rings once, then returns to the home screen.

Training voice recognition

If your phone is having trouble recognizing your voice, you can train it with the commands "**Yes**," "**No**," and "**Wake up**."

1. Select **Menu** → **Settings** → **Voice Services**.
2. Select **Voice Training**.
3. Read the message and press OK.
4. Select **Train All**.
5. Follow the prompts for each word until training is complete.

Note: The "Wake up" command can only be used with a hands-free car kit or headset (both sold separately). See page 97.

---

9 USING AXCESS APPS

About Axcess Apps™

Your Slider phone has the added ability to download and manage applications through the Axcess Shop.

Axcess Apps brings you the full range of applications and services you have come to expect from the Internet: Email, real-time navigation services, games, relevant news, and much more.

For more information

For more information about Axcess Apps capabilities and application pricing, contact Alltel.

How does Axcess Apps work?

You connect to the server, download applications, and then manage them as you like. When you choose an application, you have the option of choosing a demo, various limited-use options, or the full version—all varying in price. If you choose a demo, Axcess Apps lets you know when it has expired. If you choose a priced version, the amount is added to your phone bill. The Axcess Shop also lets you know if you're running out of

memory. At that point, you can either disable an application or remove it completely.

Once applications are loaded, you can update to newer versions as they become available.

Downloading an application

1. From the home screen, select **Menu**. Look for the **Axcess Apps** menu. It is in the main menu. The icon looks like two arrowheads.

Note: You can also use a shortcut to **Axcess Apps** from the home screen by pressing 9.

2. Select **Axcess Apps**. The **Axcess Apps** menu contains **Axcess Shop** (indicated by a shopping cart icon). Axcess Shop is your link to downloading applications.
3. Select **Axcess Shop**. When a connection to the server is made, the Axcess Shop menu appears with a list of application types to choose from.
4. Select an application type. A full list of applications of the type you selected appears. New apps are indicated by an arrow on the left.

Note: Long titles scroll left as you highlight them.

5. Select an application. A list of usages appear. There may be one or more usages available. The costs are specified for each.

6. Select a usage. You are then prompted by a message asking you to confirm your choice.
7. Select **Yes** to confirm. The application is downloaded to your phone.

Note: Download times vary.

8. To open the application now, select **Yes**. If you choose **No**, you return to the Axcess Apps menu, where you see a link to your new application.

Note: Your connection to the application server automatically ends after 30 seconds, unless you connect again to download more apps. If you want to end the connection manually, press .

Opening an application

Downloaded applications are stored under the Axcess Apps menu. Each application comes with its own unique icon, to help you identify it easily.

1. Select **Menu** → **Axcess Apps**.

Note: The Axcess Apps icon always remains at the top of this menu. Downloaded applications are listed after.

2. Highlight and select the icon for the application you want to open.

Viewing application details

You can get information about the size of an application and how many uses it has left before it runs out.

1. Select **Menu** → **Axcess Apps** → **Settings** → **Manage Apps**.
2. Select the application you want details for.

Removing an application

Important: If you remove an application, it is removed completely from your phone. If you want to use it again, you must pay for it again. If you want to free up space on your phone, we recommend you disable the application (see next section).

---

1. Select **Menu** → **Axcess Apps** → **Settings** → **Manage Apps**.
2. Select the application and then select **Remove**.
3. Select **Yes** to confirm your choice.

Disabling an application

If you are running out of memory and would like to download more applications, but do not want to completely remove those you have paid for,

you can simply disable them. This means you have to re-download an application in order to use it again, but don't have to pay for it again.

1. Select **Menu** → **Axcess Apps** → **Settings** → **Manage Apps**.
2. Select the application and then select **Lock App**.
3. Select **Yes** to confirm your choice.

Note: The app is still listed in the Axcess Apps menu. The icon looks like an empty box.

Checking available memory

The amount of available memory depends on the number of applications you downloaded.

1. Select **Menu** → **Axcess Apps** → **Settings** → **Manage Apps**.

   System Info is already highlighted. The amount of memory left is shown at the bottom of the screen.You can get more detailed memory information as follows.
2. Select **System Info**. The System Info screen is displayed with further information.

Voice Memo

The Voice Memo tool allows you to record and play back audio memos.

Shortcut: You can access voice memo quickly by setting up a shortcut. See “Redefining the “up” feature shortcut” on page 78.

Recording a voice memo

1. Select **Menu** → **Tools** → **Voice Memo** → **Record New**.

   The phone says: “Please record at the tone.”

2. Say your memo and press OK to select ■ when finished.
   - To review your recording, press OK to select ▶.
   - To save a name for your memo, press ◯ right and select **Name**. You may enter up to 18 characters. Memos saved without names are identified by date and time.
3. Press OK to select **Save**.

Playing a voice memo

1. Select **Menu** → **Tools** → **Voice Memo**.
2. Highlight the memo you want to hear.
3. Press OK.
4. Press OK to select ▶.

Rewind and fast forward

To rewind or fast forward a voice memo while it is playing, select ◀◀ to rewind or ▶▶ to fast forward.

Naming a saved voice memo

1. Select **Menu** → **Tools** → **Voice Memo**.
2. Highlight the memo and press OK.
3. Press ◯ right to highlight **Name**.
4. Press OK and follow the prompts.

Erasing a saved voice memo

1. Select **Menu** → **Tools** → **Voice Memo**.
2. Highlight the memo and press OK.

3. Press ◯ right to highlight **Erase**.
4. Press OK and follow the prompts.

Scheduler

The Scheduler allows you to schedule events and set reminder alerts.

Adding an event

1. Select **Menu** → **Tools** → **Scheduler**.
   - For a day in this month, select **View Day**. Press ◯ left or right to scroll through days.
   - For a day in a different month, select **View Month**. Press ◯ up or down to scroll through months, and right or left to scroll through days.
2. Press OK to add an event to a selected date.
3. Enter a name for the event and press OK. For help entering text, see page 43.
4. Set the event Start time, Duration, and Alarm and press OK.
   - Press ◯ up or down to select hour, minutes, and timing of alarm.
   - Press ◯ left or right to move between fields.
5. Add a note to the event and press OK.

6. Press to return to the home screen or OK to return to scheduler options.

Viewing, editing, or erasing an event

1. Select **Menu** → **Tools** → **Scheduler**.
2. Select **View Day** or **View Month** to find the event you want to view, edit, or erase.
3. Press up, down, left, or right to highlight an event and press OK to select it.
4. Press right and press OK to select **Edit**, **Erase**, or **New**. Follow the prompts.
5. Press to return to the home screen or CLR to return to scheduler options.

Alarm Clock

Use the Alarm Clock to set an alert for a specific time. The alert occurs only if the phone is on.

1. Select **Menu** → **Tools** → **Alarm Clock** → **Set**.
   - Press up or down to select an hour and minutes.
   - Press left or right to switch between hours, minutes, and a.m./p.m.
   - Use the phone keypad to enter numbers.
2. Press OK to select **Done** and save the setting.

3. When the alarm rings, select **Off** to turn off the alarm or **Snooze** to silence it for 10 minutes.

Tip Calculator

The Tip Calculator helps you calculate how much tip to include on a bill.

1. Select **Menu** → **Tools** → **Tip Calculator**.
2. Enter the amount of your bill and press OK.
3. Select the amount you want to include as a tip (10%, 15%, 18%, 20%, Other) and press OK. Your total bill appears, including tip.
4. If you want to split the bill, press right and press OK to select **Split**.
5. Press CLR to clear the default of 2 guests.
6. Enter the number of guests and press OK. The amount each guest pays is calculated.

Calculator

Use the calculator for basic mathematical equations.

1. Select **Menu** → **Tools** → **Calculator**.
2. Use the keypad to enter numbers.
3. Press OK to select mathematical operations.

4. Press CLR to clear one function or one digit from the screen. Hold down to clear all of the digits and operations and display a zero.
5. Press ⏻ to exit the calculator and return to the home screen.

Timer

This timer counts down for a specified amount of time. It beeps when that amount of time has elapsed.

1. Select **Menu** → **Tools** → **Timer**.
2. Press OK to **Set**.
3. Press ◯ up or down to set the hours, minutes, and seconds. To move the cursor, press ◯ left or right.
4. Select **Start** to begin the countdown.

   Select **Stop** to pause the countdown.
5. When the alarm rings, press ⏻ to silence it.

Stopwatch

1. Select **Menu** → **Tools** → **Stopwatch**.
2. Select **Start** to have the stopwatch begin counting.
3. Select **Stop** to stop counting.

4. Select **Reset** to set the counter back to zero and begin counting again. Press CLR when finished.

11 MEDIA GALLERY

Your Slider phone comes with a doodler and storage for downloaded sounds and pictures.

Doodler

Doodler™ allows you to create and manipulate images, import shapes, and save images as screen savers or as wallpaper, depending available services.

1. Select **Menu** → **Media Gallery** → **Doodler**.
2. Press OK to select **Yes** if you see the prompt, "Dim backlight to conserve battery?"
3. Wait 5 seconds for the intro screen to disappear, or press OK to clear it.
4. Select **New Doodle** to open the drawing screen. You will see a flashing cursor in the middle of the screen:

   The selected tool is highlighted in yellow. By default, the selected tool is "draw black."

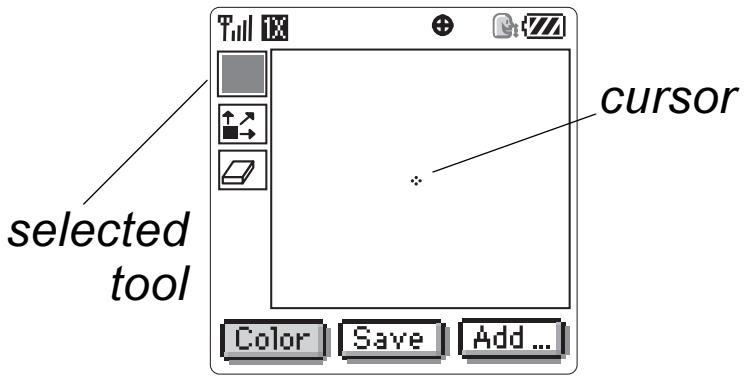

5. Use keys 1–9 to move the cursor around the screen as indicated.

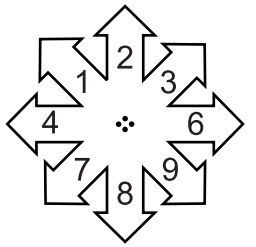

Note: Press 5 JKL to bring the cursor back to center.

Using the Doodler toolbar

To change between the tools on the toolbar, highlight the desired tool.

- draw (in the color shown)
- move cursor
- eraser

Tip: For a shortcut to the Move feature, press * SHIFT.

Modifying the doodle

To modify your doodle, press ◯ right or left to highlight an option at the bottom of the screen:

- **Color**—Select to change the color of the cursor (the line you're drawing).
- **Add Shape**—Select an existing shape such as a circle and re-size, rotate, or move it. Select **Done** when finished.

  - **Size**—Enlarge or shrink a defined shape by pressing OK repeatedly.
  - **Rotate**—Change the position in 90-degree increments.
  - **Move**—Move the image around the screen using keys 1–9.
- **Clear**—Clear the entire screen.
  Tip: The shortcut to this feature is #SPACE.

Saving the doodle

It is a good idea to save the doodle while you are working on it. If you receive a call while creating an unsaved doodle, it will be lost.

- Highlight **Save** and press OK. The image will be saved in the My Pictures folder. (See page 116.)

Resuming a doodle

- To return to the last saved doodle you were working on, select **Menu** → **Media Gallery** → **Doodler** → **Resume Doodle**.
- To return to another saved doodle, select **Menu** → **Media Gallery** → **Doodler** → **My Pictures**.

My Sounds

Your Slider phone contains preset sounds, which you can add to outgoing text messages. (Check with Alltel for availability.)

To access stored sounds:

1. Select **Menu** → **Media Gallery** → **My Sounds**.
2. Press up or down to scroll through the sounds.
3. Highlight an option and press OK to select it:
   - **Play** allows you to listen to the sound.
   - **Send** opens a new message entry screen.
   - **Delete** erases the sound from your My Sounds list.

My Pictures

Your phone can store 25 graphics. The My Pictures menu stores graphics you have created using the Doodler or received via text messaging. It also includes predefined graphics for your use. (Check with Alltel for availability.)

Note: All downloaded graphics are also stored in the Screen Saver menu.

To view, edit, or erase graphics:

1. Select **Menu** → **Media Gallery** → **My Pictures**.
2. Press up or down to scroll through the graphics.
3. Highlight an option and press OK to select it:
   - **Send** opens a new message entry screen.
   - **Assign** sets your graphic as a screen saver.
   - **Edit** takes you to the Doodler, where you can modify the graphic. You cannot edit predefined graphics.
   - **Delete** erases the graphic from memory. The graphic is also erased from the Screen Saver menu. (This option is available only with graphics you have created or saved. You cannot delete predefined graphics.)
   - **Exit** returns you to the home screen.

Note: When you have 25 graphics stored and want to add additional graphics, you will need to delete older files.

---

12 CONNECTING TO THE INTERNET

You can use your phone to browse the Internet if you have obtained phone Internet services from Alltel and if over-the-air Internet access is available in your area.

Note: You cannot receive incoming calls while you are using the Web Browser.

Starting the Web Browser

1. Select **Menu** → **Web Browser**.

   A message informs you that airtime fees apply for browser use. For more information about how airtime is charged, contact Alltel.

   Note: If you wish to cancel this message prompt, see "Changing the Web prompt" on page 121.

2. Press OK to continue.

   If this is the first time you have connected to the Internet, a message informs you that security is not yet enabled for your Web Browser.

3. Press OK to select **Yes** to enable security.

When you are connected to the Web Browser, a browser home page appears. It has a list of bookmarks and some Web menu options at the bottom of the screen.

- A appears in a secure session.
- An underline and an arrow indicate that there is more text. Press down to view more text. Press to return to the previous screen.

4. When you have finished using the Internet, press to exit the browser.

Using the Web menu options

The following options may appear on your screen:

- **Home** returns you to the main Web Browser window, or home page.
- **Mark Site** saves the current location as a bookmark for easy access.
- **Bookmarks** displays a list of your saved Web sites.
- **Setup** gives you options for changing how information is displayed.
  - **Show URL** displays the entire URL.
  - **About Openwave** displays information about your Web Browser version.
  - **Encryption** should not be used unless you are instructed to do so by Alltel.

- **UP.Link** selects a different browser server. You can use this option if you have more than one Web Browser account.
- **Restart** restarts the Web Browser.

Searching for a Web site

How you search for a Web site depends on your phone service. For more information about searching for a Web site, contact Alltel.

Bookmarking a Web site

1. Go to the site you would like to bookmark.
2. Select **Mark Site from** the bottom of the screen.

Going to a bookmarked site

1. Select **Menu** → **Web Browser**.
2. If you see a message prompt, press OK to continue.
3. From your Web home page, press right to highlight **Bookmarks**. A list of bookmarks appears.
4. Enter the number corresponding to the bookmark you want and press OK.

Checking Net alerts

Alerts received from a Web site are sent to your **Net Alerts** inbox.

1. Select **Menu** → **Messages** → **Net Alerts**. This action launches the browser inbox.
2. Press OK to accept browser fees.
3. Select an alert and follow the prompts.

Changing the Web prompt

You can choose to receive a confirmation prompt whenever you start or exit the Web Browser.

1. Select **Menu** → **Settings** → **Convenience** → **Web Prompt**.
2. Highlight an option and press OK to select it:
   - **At Start** confirms that airtime fees will be applied when you use the browser.
   - **At End** verifies you want to exit the browser.
   - **Both** prompts you when you start the browser and exit the browser.
   - **No Prompts** does not use any prompts.

INDEX

Numerics

1-Touch dialing, 37

A

airplane mode, 33
Alarm Clock, 10, 109
alerts, 35, 88, 121
analog mode, 9
Auto-Erase setting, 69
auto-hyphenation, 82
AutoText, 59, 60, 70

B

backlighting, 81
banner, 80
battery, 1
bookmarks, 120
button, 42

C

Calculator, 110
calling emergency numbers, 32
calls
    making and answering, 4
    missed, 34
color themes, 84
Com Port speed, 89
contacts, 50, 52, 54
Contacts directory, 48
Countdown Timer, 111

D

data/fax setup, 41, 91
digital mode, 9
display contrast, 82
Doodler, 113

E

emergency
    calls, 32
    exiting emergency mode, 32
    position location, 10, 92
erasing
    all contacts, 87
    text messages, 67
external devices
    laptop or PC, 89
    TTY/TDD, 89

F

Fast Find, 56
fax mode, 91
finding a saved phone number, 54
frequent contacts, 54

G

games, 113
group lists, 58, 69

H

hands-free car kit, 98
hands-free headset, xiv, 88
hard pause, 50

I

icons, 9
InBox, 65

L

language, 79
lights, 81, 82
limiting calls out, 87
lock code, 84
locking phone, 85

M

memory, 67
menu view, 80

messages
erasing, 67
reading, 66
retrieving, 64
signature, 60
viewing, 62
missed calls, 34

N

net alerts, 121
number type, 49

O

open to answer, 32
OutBox, 62

P

pauses in phone numbers, 50
phone book
see Contacts directory
phone numbers
editing, 52
finding quickly, 56
types of, 49
verifying your own, 4
phone, unlocking, 85
position location, 10, 92
power backlighting, 82
Power Save mode, 81
prepend, 15, 36

R

redialing a number, 28
resetting the phone, xiii
ringers, 4, 42, 75, 76
roaming, 10, 41, 42

S

saved phone numbers, 52, 56
Scheduler, 108
screen icons, 9

screen savers, 83
secret contacts, 36, 49
security, 84
shortcuts, 78
signal strength, 9
silent mode, 73
sound files, 116
speakerphone, 40, 77
speed dialing, 37
Stopwatch, 111

T

technical support, 101
text entry, 45
text messages
    erasing, 67
    opening on screen, 64
    pre-written, 59, 60, 70
    to multiple recipients, 69
    viewing the outbox, 62
time pause, 50
time/date format, 84
Tip Calculator, 110
Touch2Talk, 11
TTY/TDD, 90

U

unlocking the phone, 85

V

vibrate, 73
voice memo, 107
Voice Recognition
    digit dialing, 95
    expert mode, 96
    voice dialing, 49, 94
    voice training, 100
    voice wake-up, 97
voicemail, 4, 38
volume, 40, 77

W

wallpaper, 83
Web Browser, 118, 120
Web security, 119